 
 
 


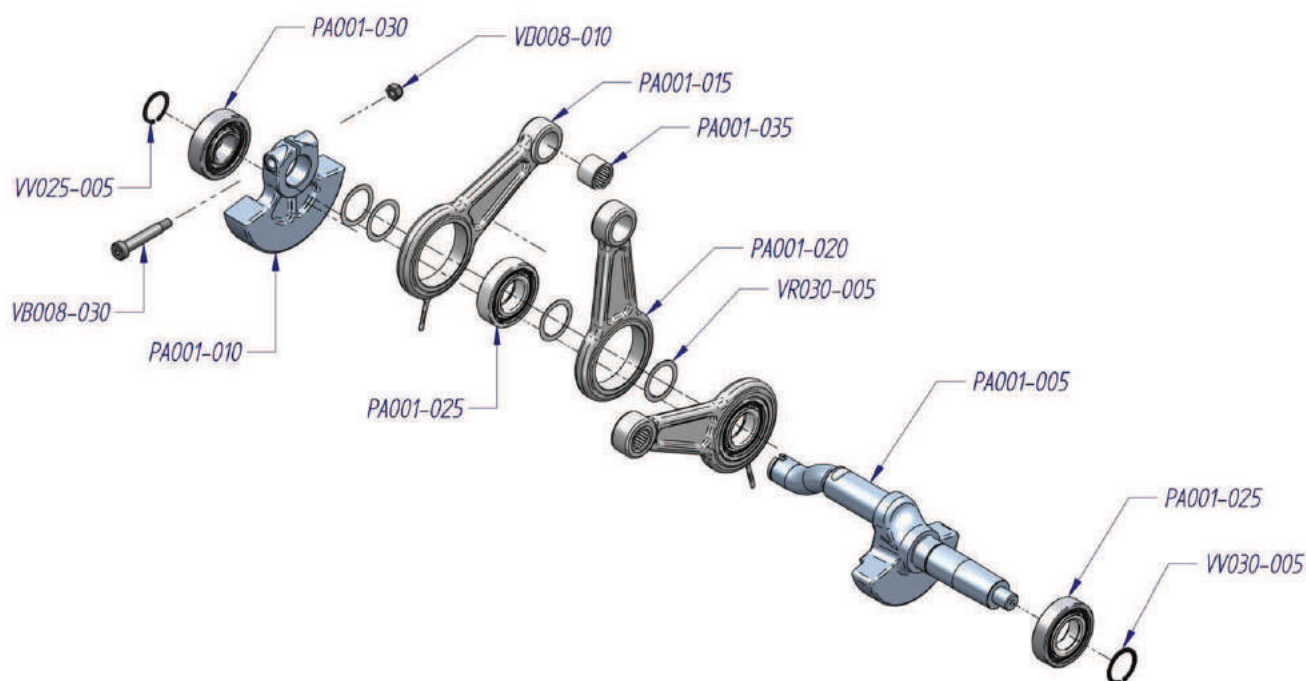


| CODE      | DESCRIPTION                         |  | CODE      | DESCRIPTION    |  | CODE      | DESCRIPTION |  |
|-----------|-------------------------------------|--|-----------|----------------|--|-----------|-------------|--|
| PA001-006 | Shaft                               |  | PA001-025 | Roller bearing |  | VD008-010 | Nut         |  |
| PA001-011 | Counterbalance                      |  | PA001-030 | Roller bearing |  | VR030-005 | Washer      |  |
| PA001-015 | Connecting rod with oil thrower pin |  | PA001-035 | Roller bearing |  | VV025-005 | Safety ring |  |
| PA001-020 | Connecting rod                      |  | VB008-030 | Screw          |  | VV030-005 | Safety ring |  |

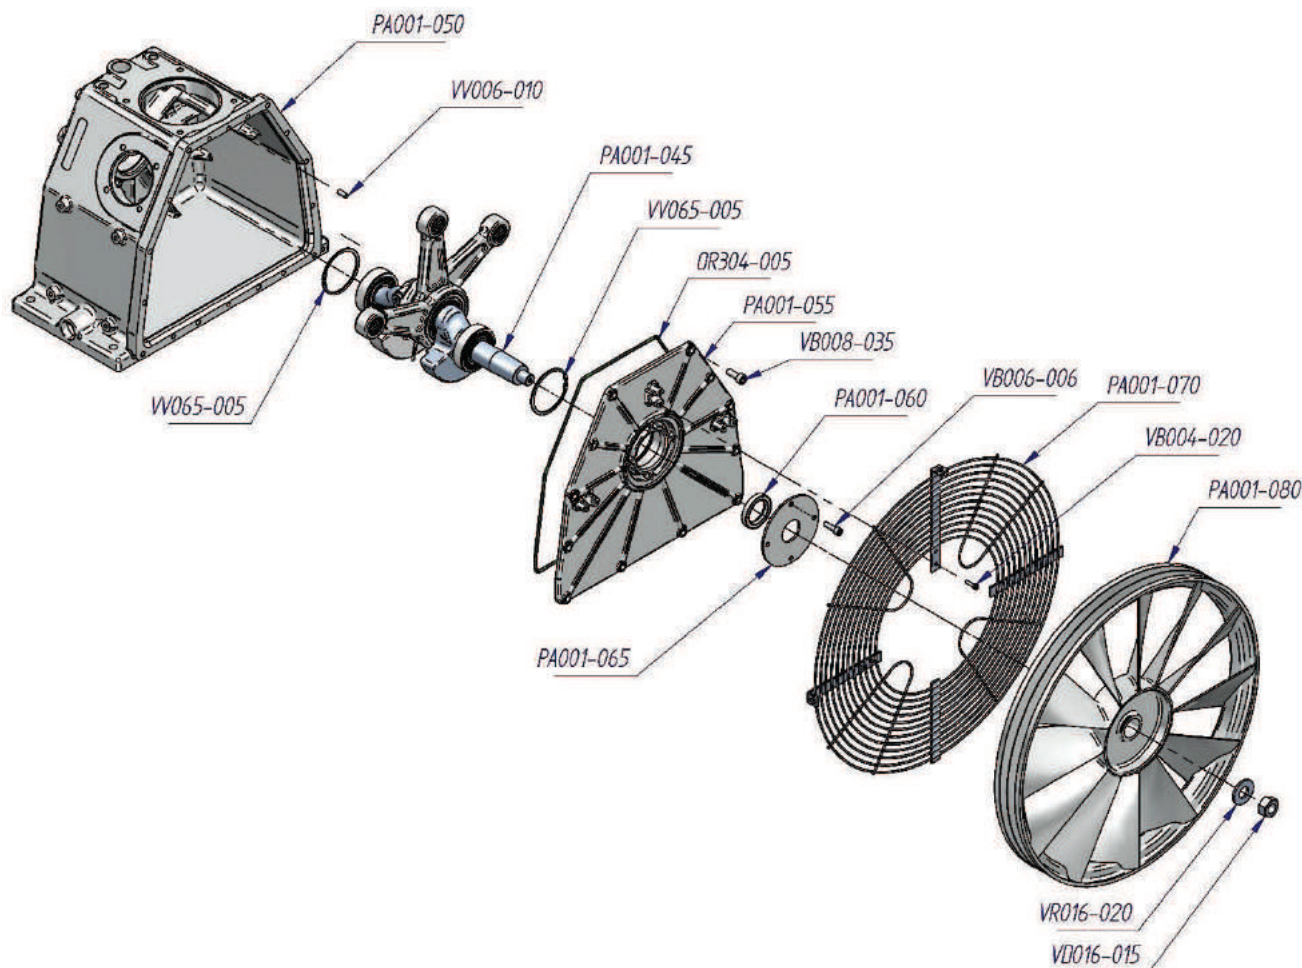


| <i>CODE</i> | <i>DESCRIPTION</i>               |  | <i>CODE</i> | <i>DESCRIPTION</i>    |  | <i>CODE</i> | <i>DESCRIPTION</i> |  |
|-------------|----------------------------------|--|-------------|-----------------------|--|-------------|--------------------|--|
| OR304-005   | O-ring                           |  | PA001-065   | Oil seal flange       |  | VB008-035   | Screw              |  |
| PA001-045   | Shaft complete of connecting rod |  | PA001-070   | Metal protection      |  | VD016-015   | Nut                |  |
| PA001-050   | Compressor crankcase             |  | PA001-080   | Pulley-fan compressor |  | VR016-020   | Washer             |  |
| PA001-055   | Closing crankcase flange         |  | VB004-020   | Screw                 |  | VV006-010   | Pin                |  |
| PA001-060   | Oil seal                         |  | VB006-006   | Screw                 |  | VV065-005   | Safety ring        |  |

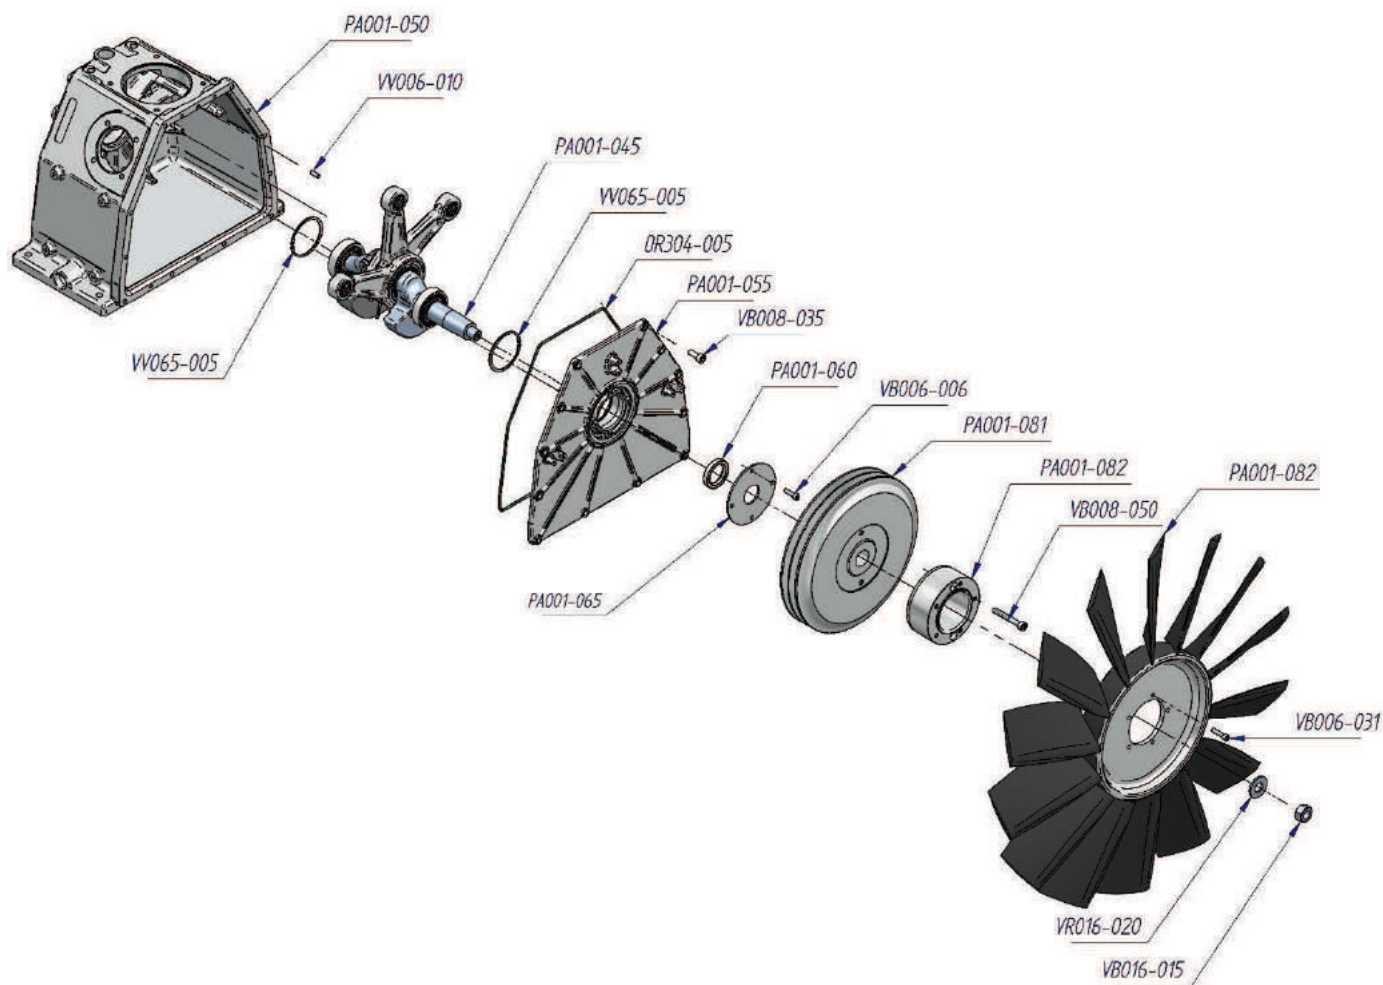


| CODE      | DESCRIPTION                      | CODE      | DESCRIPTION     | CODE      | DESCRIPTION |
|-----------|----------------------------------|-----------|-----------------|-----------|-------------|
| OR304-005 | O-ring                           | PA001-065 | Oil seal flange | VB008-035 | Screw       |
| PA001-045 | Shaft complete of connecting rod | PA001-081 | Pulley          | VB016-015 | Nut         |
| PA001-050 | Compressor crankcase             | PA001-082 | Fan             | VR016-020 | Washer      |
| PA001-055 | Closing crankcase flange         | VB006-006 | Screw           | VV006-010 | Pin         |
| PA001-060 | Oil seal                         | VB006-031 | Screw           | VV065-005 | Safety ring |

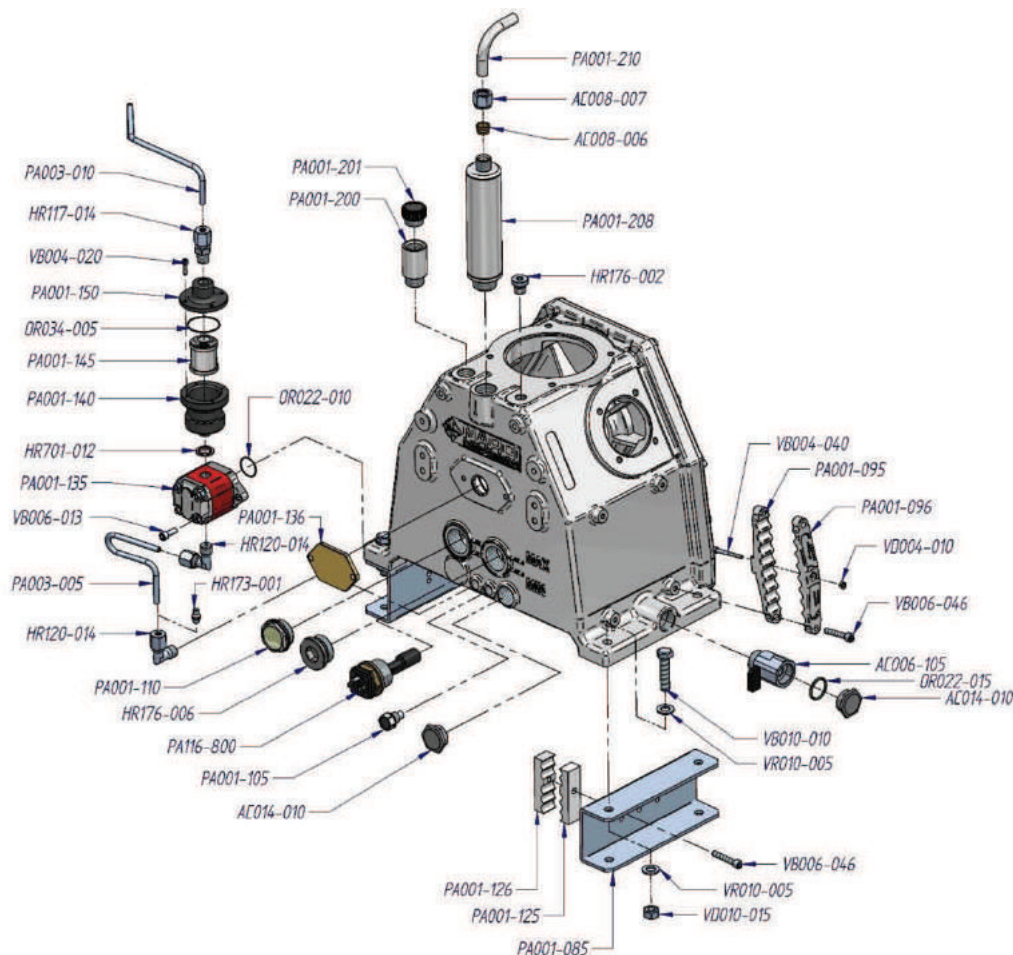 


| <i>CODE</i> | <i>DESCRIPTION</i>      |  | <i>CODE</i> | <i>DESCRIPTION</i>         |  | <i>CODE</i> | <i>DESCRIPTION</i> |  |
|-------------|-------------------------|--|-------------|----------------------------|--|-------------|--------------------|--|
| AC006-105   | Ball valve              |  | PA001-096   | Support cooling tube       |  | PA003-010   | Tube oil pump      |  |
| AC008-006   | Oqive for tube 12mm     |  | PA001-105   | Magnetic pluq              |  | PA116-800   | Oil alert          |  |
| AC008-007   | Nut for tube 12 mm      |  | PA001-110   | Visual oil level plug      |  | VB004-020   | Screw              |  |
| AC014-010   | Closure plug            |  | PA001-125   | Support cooling tube       |  | VB004-046   | Screw              |  |
| HR117-014   | Pipe fitting            |  | PA001-126   | Support cooling tube       |  | VB006-013   | Screw              |  |
| HR120-014   | Pipe fitting "L"        |  | PA001-135   | Oil pump                   |  | VB006-046   | Screw              |  |
| HR173-001   | Closure connection tube |  | PA001-136   | Closure flange             |  | VB010-010   | Screw              |  |
| HR176-002   | Closure pluq            |  | PA001-140   | Oil filter holder chamber  |  | VD004-010   | Nut                |  |
| HR176-006   | Closure plug            |  | PA001-145   | Oil filter                 |  | VD010-015   | Nut                |  |
| HR701-012   | Washer gasket           |  | PA001-150   | Closure oil filter chamber |  | VR010-005   | Washer             |  |
| OR022-010   | O-ring                  |  | PA001-200   | Oil fitting pipe           |  |             |                    |  |
| OR022-015   | O-ring                  |  | PA001-201   | Plug                       |  |             |                    |  |
| OR034-005   | O-ring                  |  | PA001-208   | Oil separator              |  |             |                    |  |
| PA001-085   | Support compressor      |  | PA001-210   | Tube                       |  |             |                    |  |
| PA001-095   | Support cooling tube    |  | PA003-005   | Tube oil pump              |  |             |                    |  |

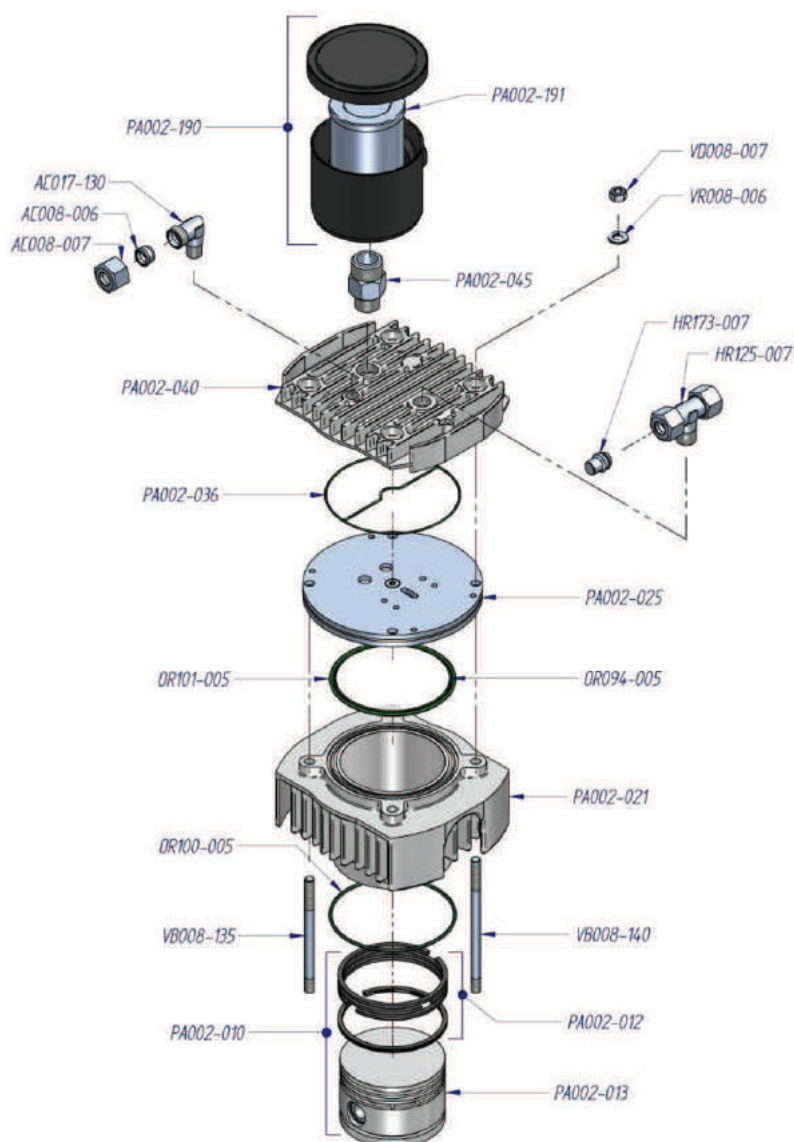 


| CODE      | DESCRIPTION        | CODE      | DESCRIPTION                       | CODE      | DESCRIPTION             |
|-----------|--------------------|-----------|-----------------------------------|-----------|-------------------------|
| AC008-006 | Ogive              | PA002-010 | Complete piston                   | PA002-190 | Complete intake filter  |
| AC008-007 | Nut                | PA002-012 | Set Piston rings                  | PA002-191 | Intake filter cartridge |
| AC017-130 | Pipe fitting "L"   | PA002-013 | Piston                            | VB008-135 | Screw                   |
| HR125-007 | Pipe fitting "T"   | PA002-021 | Cylinder 1 <sup>st</sup> stage    | VB008-140 | Screw                   |
| HR173-007 | Closure connection | PA002-025 | Plate valve 1 <sup>st</sup> stage | VD008-007 | Nut                     |
| OR094-005 | O-ring             | PA002-036 | O-ring                            | VR008-006 | Washer                  |
| OR100-005 | O-ring             | PA002-040 | Head 1 <sup>st</sup> stage        |           |                         |
| OR101-005 | O-ring             | PA002-045 | Connection                        |           |                         |

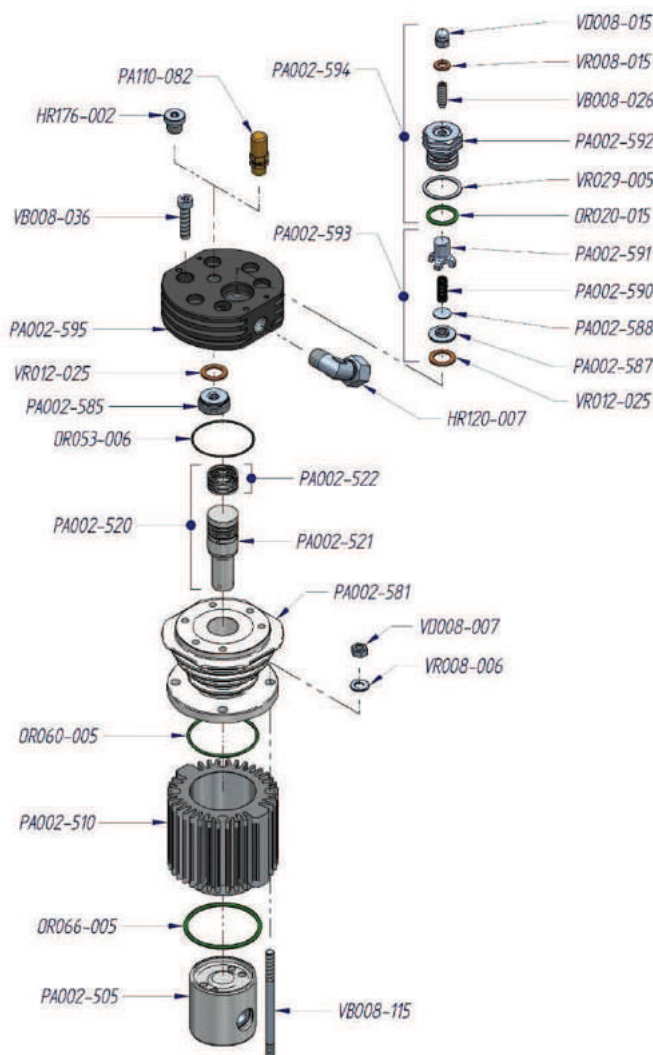 


| CODE      | DESCRIPTION                | CODE      | DESCRIPTION                      | CODE      | DESCRIPTION |
|-----------|----------------------------|-----------|----------------------------------|-----------|-------------|
| HR120-007 | Pipe fitting "L"           | PA002-581 | Cylinder                         | VB008-026 | Screw       |
| HR176-002 | Closure plug               | PA002-585 | Suction valve                    | VB008-036 | Screw       |
| OR020-015 | O-ring                     | PA002-587 | Valve seat                       | VB008-115 | Screw       |
| OR053-006 | O-ring                     | PA002-588 | Valve plate                      | VD008-007 | Nut         |
| OR060-005 | O-ring                     | PA002-590 | Valve spring                     | VD008-015 | Nut         |
| OR066-005 | O-ring                     | PA002-591 | Pressure valve insert            | VR008-006 | Washer      |
| PA002-505 | Piston guide               | PA002-592 | Valve coupling                   | VR008-015 | Washer      |
| PA002-510 | Cylinder                   | PA002-593 | Pressure valve insert            | VR012-025 | Washer      |
| PA002-520 | Complete piston with rings | PA002-594 | Complete coupling pressure valve | VR029-005 | Washer      |
| PA002-521 | Piston                     | PA002-595 | Valve head                       |           |             |
| PA002-522 | Set piston rings           | PA110-082 | Safety valve                     |           |             |

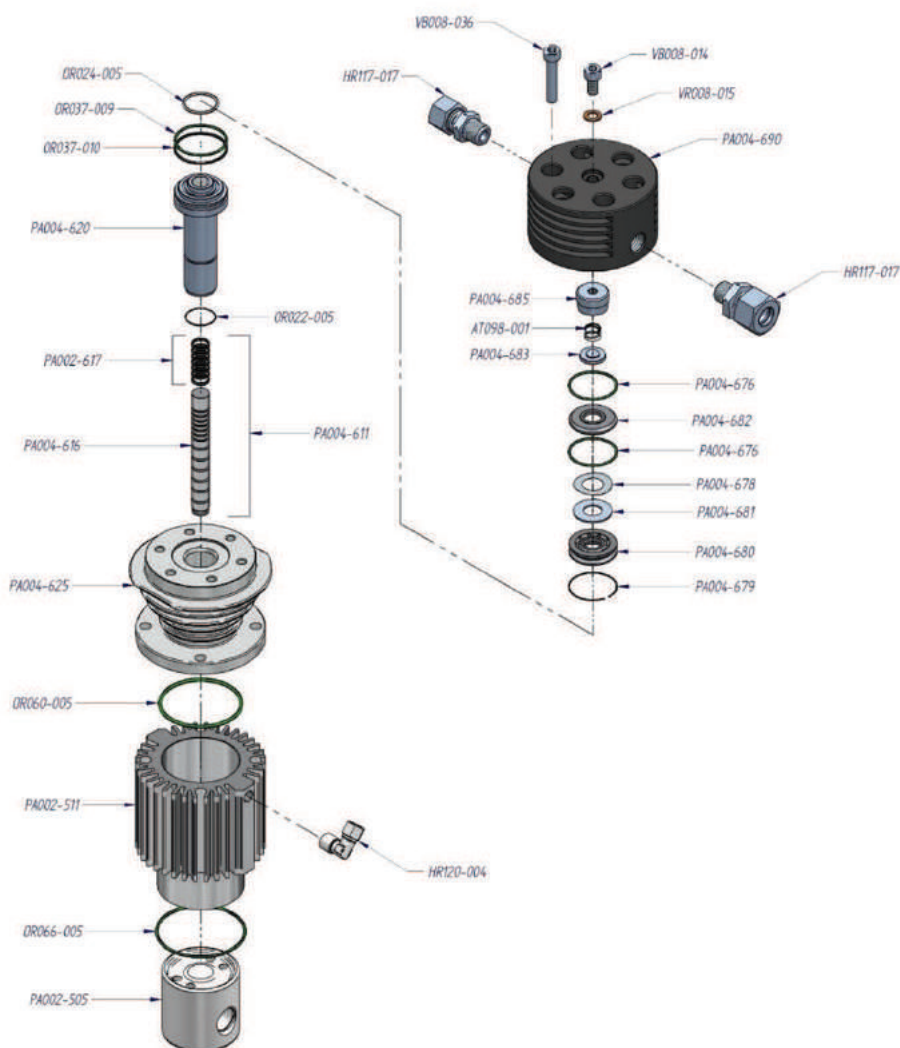 


| CODE      | DESCRIPTION         | CODE      | DESCRIPTION                | CODE      | DESCRIPTION   |
|-----------|---------------------|-----------|----------------------------|-----------|---------------|
| AT098-001 | Spring              | PA004-611 | Complete piston with rings | PA004-683 | Valve top     |
| HR117-017 | Pipe fitting direct | PA004-616 | Piston                     | PA004-685 | Suction valve |
| HR120-004 | Pipe fitting "L"    | PA002-617 | Set piston rings           | PA004-690 | Valve head    |
| OR037-009 | O-ring              | PA004-620 | Cylinder's pipe            | VB008-014 | Screw         |
| OR037-010 | O-ring              | PA004-625 | Cylinder                   | VB008-036 | Screw         |
| OR022-005 | O-ring              | PA004-680 | Coupling pressure valve    | VR008-015 | Washer        |
| OR024-005 | O-ring              | PA004-681 | Pressure valve             |           |               |
| OR060-005 | O-ring              | PA004-682 | Top valve                  |           |               |
| OR066-005 | O-ring              | PA004-676 | Special O-Ring             |           |               |
| PA002-505 | Piston guide        | PA004-678 | Special spring             |           |               |
| PA002-511 | Cylinder            | PA004-679 | Setger valve               |           |               |

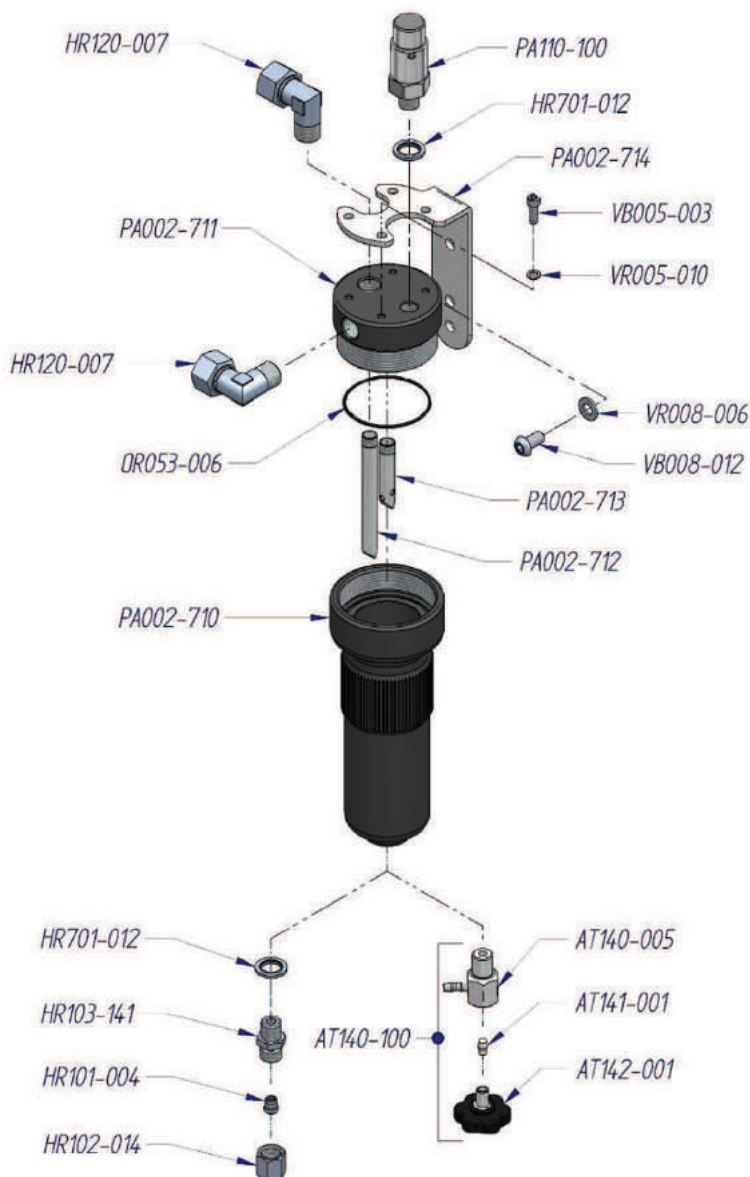 


| CODE      | DESCRIPTION                     | CODE      | DESCRIPTION           | CODE      | DESCRIPTION              |
|-----------|---------------------------------|-----------|-----------------------|-----------|--------------------------|
| AT140-005 | Body drain valve complete       | HR120-007 | Pipe fitting "L"      | PA002-714 | Support filter separator |
| AT140-100 | Condensate drain valve complete | HR701-012 | Washer gasket         | PA110-100 | Safety valve             |
| AT141-001 | Rilsan nut                      | OR053-006 | O-ring                | VB004-021 | Screw                    |
| AT142-001 | Black screw of discharge        | PA002-710 | Body filter separator | VB008-012 | Screw                    |
| HR101-004 | Ogive                           | PA002-711 | Head filter separator | VR004-010 | Whasher                  |
| HR102-014 | Nut fitting pipe                | PA002-712 | Tube separator        | VR008-006 | Whasher                  |
| HR103-141 | Body pipe fitting               | PA002-713 | Tube separator        |           |                          |

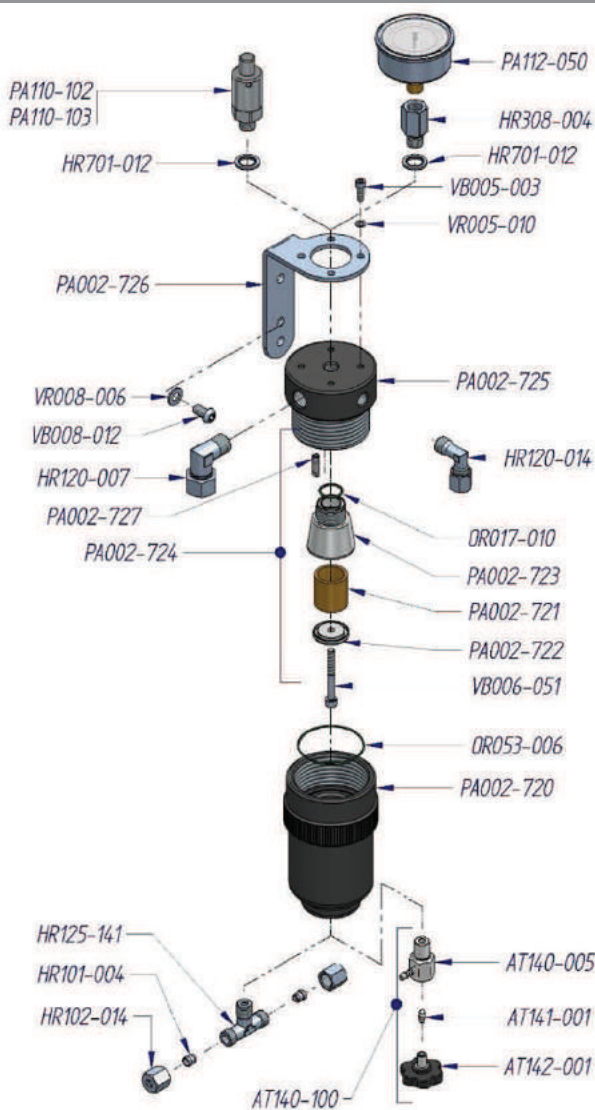 


| CODE      | DESCRIPTION                     | CODE      | DESCRIPTION                         | CODE      | DESCRIPTION             |
|-----------|---------------------------------|-----------|-------------------------------------|-----------|-------------------------|
| AT140-005 | Body drain valve complete       | OR017-010 | O-ring                              | PA110-103 | Safety valve PN 300 bar |
| AT140-100 | Condensate drain valve complete | OR053-006 | O-ring                              | PA112-050 | Manometer               |
| AT141-001 | Rilsan nut                      | PA002-720 | Body filter separator               | VB005-003 | Screw                   |
| AT142-001 | Black screw of discharge        | PA002-721 | Sintered filter                     | VB006-051 | Screw                   |
| HR101-004 | Ogive                           | PA002-722 | Flange                              | VB008-012 | Screw                   |
| HR102-014 | Nut filling pipe                | PA002-723 | Flange                              | VR005-010 | Washer                  |
| HR120-007 | Pipe fitting "L"                | PA002-724 | Complete filter separator cartridge | VR008-006 | Washer                  |
| HR120-014 | Pipe fitting "L"                | PA002-725 | Head filter separator               |           |                         |
| HR125-141 | Body pipe fitting "T"           | PA002-726 | Support filter separator            |           |                         |
| HR308-004 | Connection                      | PA002-727 | Tube separator                      |           |                         |
| HR701-012 | Washer gasket                   | PA110-102 | Safety valve PN 200 bar             |           |                         |

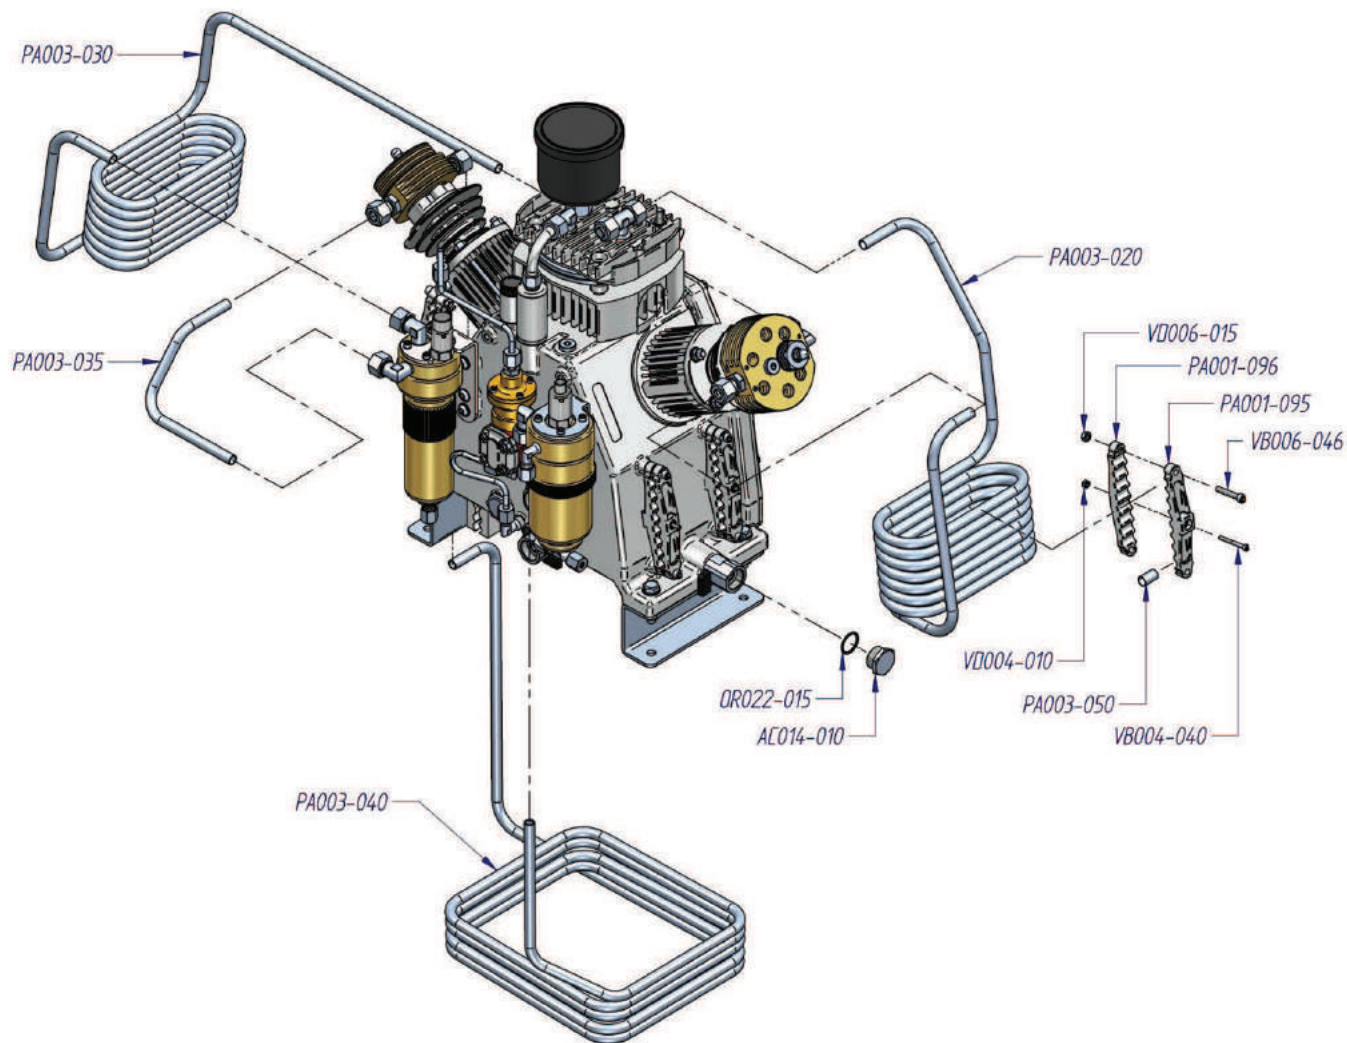 


| CODE      | DESCRIPTION       | CODE      | DESCRIPTION     | CODE      | DESCRIPTION |
|-----------|-------------------|-----------|-----------------|-----------|-------------|
| AC014-010 | Nut               | PA003-030 | Inter cooler    | VB006-046 | Screw       |
| OR022-015 | O-ring            | PA003-035 | Connecting tube | VD004-010 | Nut         |
| PA001-095 | Fixing for cooler | PA003-040 | Inter cooler    | VD006-015 | Nut         |
| PA001-096 | Fixing for cooler | PA003-050 | Tube            |           |             |
| PA003-020 | Inter cooler      | VB004-040 | Screw           |           |             |

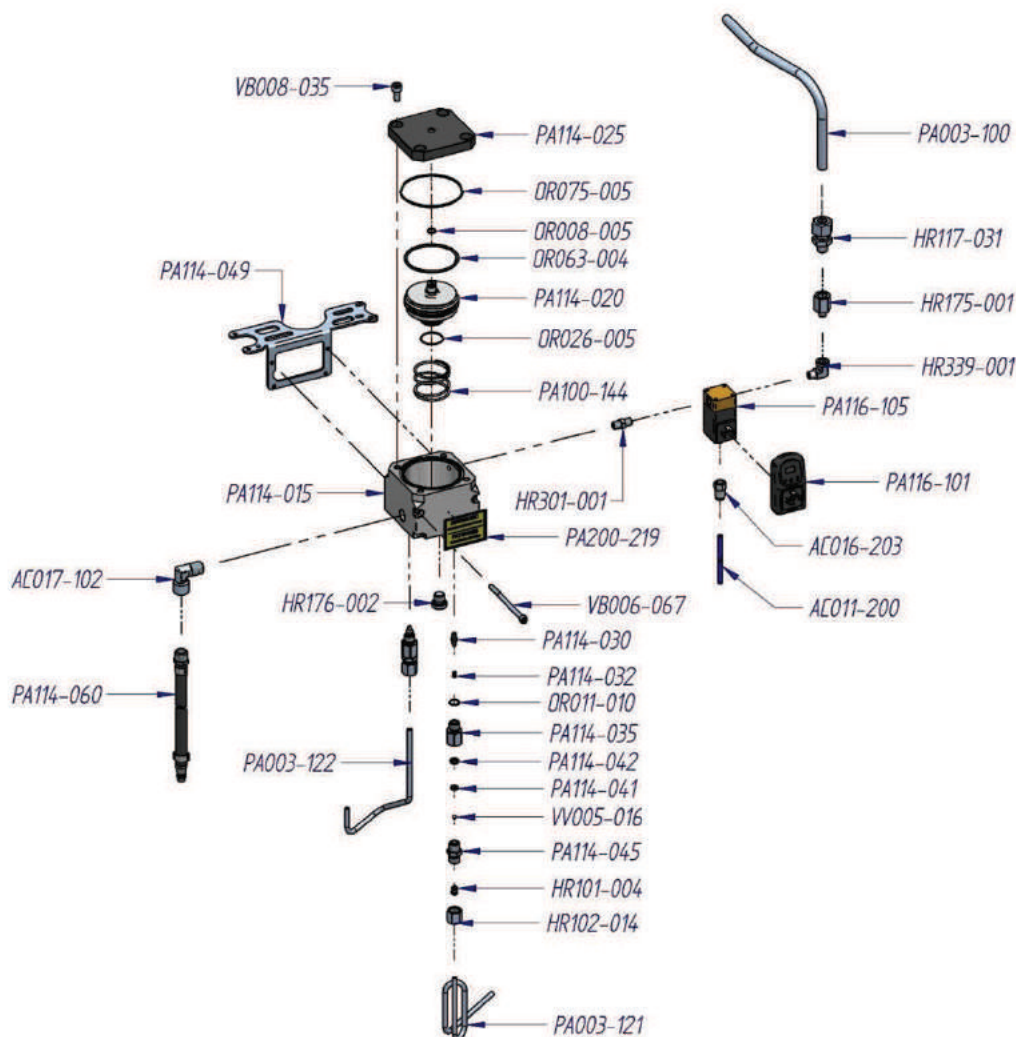 


| CODE      | DESCRIPTION      | CODE      | DESCRIPTION        | CODE      | DESCRIPTION                              |
|-----------|------------------|-----------|--------------------|-----------|------------------------------------------|
| AC011-200 | Rilsan tube      | OR011-010 | O-ring             | PA114-030 | Piston                                   |
| AC016-203 | Connection       | OR026-005 | O-ring             | PA114-032 | Spring                                   |
| AC017-102 | Pipe fitting "L" | OR063-004 | O-ring             | PA114-035 | Drain valve connection                   |
| HR101-004 | Ogive            | OR075-005 | O-ring             | PA114-041 | Sealing Ring                             |
| HR102-014 | Nut fitting pipe | PA003-100 | Tube               | PA114-042 | Reducer                                  |
| HR117-031 | Pipe fitting     | PA003-121 | Tube               | PA114-045 | Connection INOX                          |
| HR175-001 | Connection       | PA003-122 | Tube               | PA114-049 | Support condensate drain                 |
| HR176-002 | Closure plug     | PA110-010 | Spring             | PA114-060 | Hose with fittings for collecting vessel |
| HR301-001 | Nipple           | PA114-015 | Drain valve body   | PA116-101 | Timer                                    |
| HR339-001 | Connection "L"   | PA114-020 | Drain valve piston | PA116-105 | Solenoid valve 12 Volt DC                |
| OR008-005 | O-ring           | PA114-025 | Top flange         | VV005-016 | Sphere                                   |

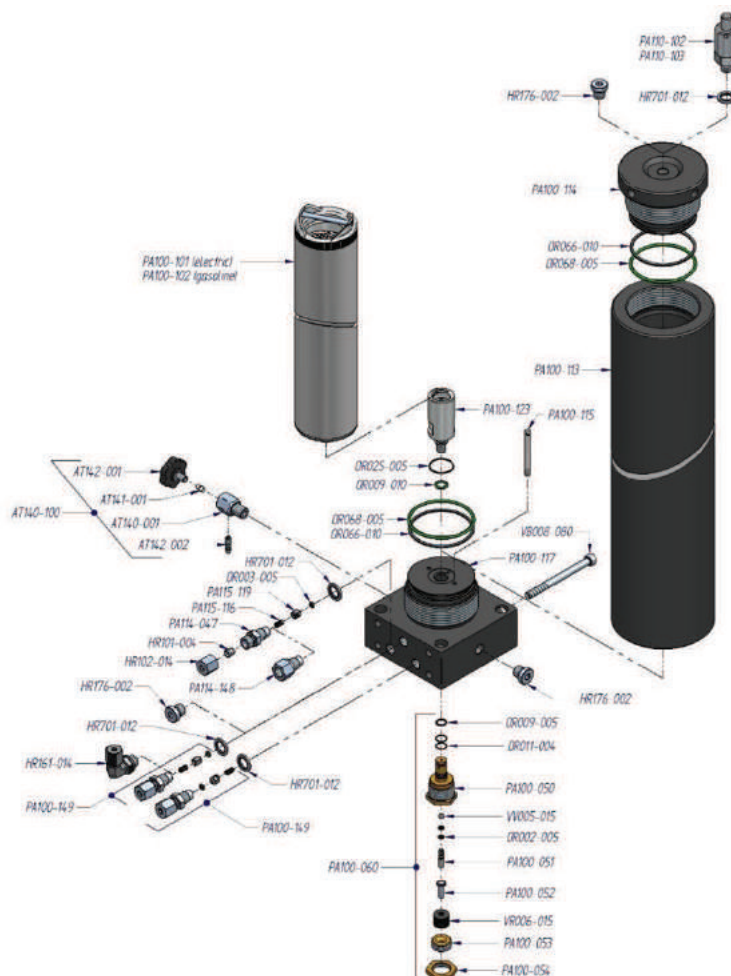 


| CODE      | DESCRIPTION                     | CODE      | DESCRIPTION                 | CODE      | DESCRIPTION                        |
|-----------|---------------------------------|-----------|-----------------------------|-----------|------------------------------------|
| AT140-001 | Drain valve housing             | OR025-005 | O-ring                      | PA100-123 | Extension filter                   |
| AT140-100 | Condensate drain valve complete | OR066-010 | O-ring                      | PA100-149 | Pipe fitting whit not return valve |
| AT141-001 | Rilsan nut                      | OR068-005 | O-ring                      | PA110-102 | Safety valve PN 200 bar            |
| AT142-001 | Black screw of discharge        | PA100-050 | Maintaining valve insert    | PA110-103 | Safety valve PN 300 bar            |
| AT142-002 | Drain out                       | PA100-051 | Piston maintaining valve    | PA114-047 | Connection                         |
| HR101-004 | Ogive                           | PA100-052 | Spring guide                | PA114-148 | Connection                         |
| HR102-014 | Nut fitting pipe                | PA100-053 | Closure plug                | PA115-116 | Spring no return valve             |
| HR161-014 | Pipe fitting "L"                | PA100-054 | Nut                         | PA115-119 | Piston no return valve             |
| HR176-002 | Closure plug                    | PA100-060 | Maintaining valve complete  | VB008-080 | Screw                              |
| HR701-012 | Washer                          | PA100-101 | Filter cartridge - electric | VR006-015 | Washer spring                      |
| OR002-005 | O-ring                          | PA100-102 | Filter cartridge - gasoline | VV005-015 | Sphere                             |
| OR003-005 | O-ring                          | PA100-113 | Filter housing              |           |                                    |
| OR009-005 | O-ring                          | PA100-114 | Head filter housing         |           |                                    |
| OR009-010 | O-ring                          | PA100-115 | Nozzle                      |           |                                    |
| OR011-004 | O-ring                          | PA100-117 | Base filter                 |           |                                    |

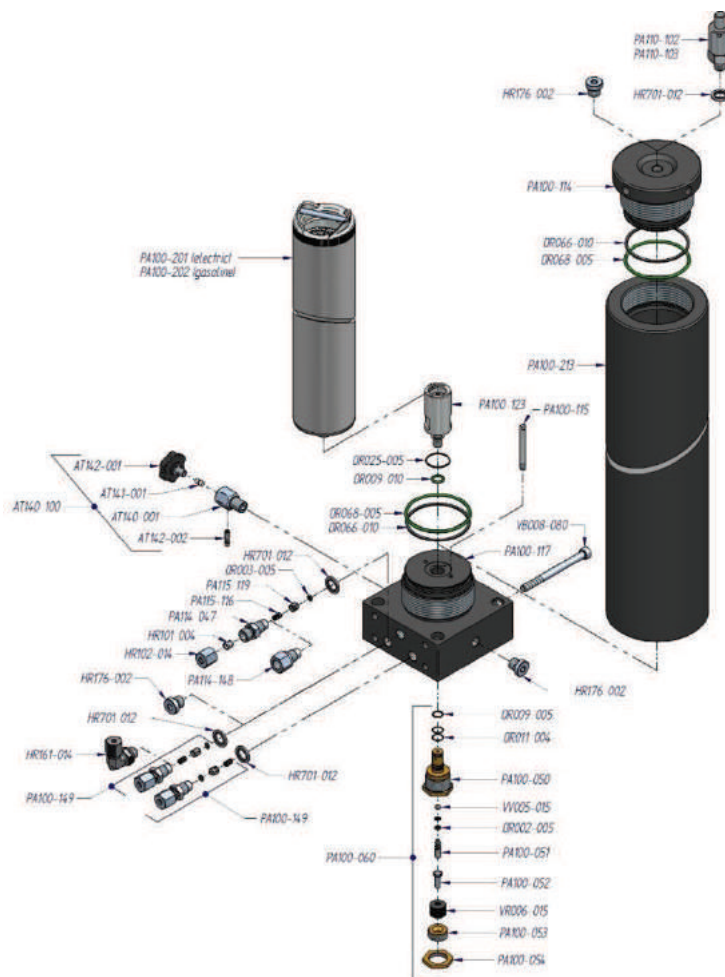 


| CODE      | DESCRIPTION                     |  | CODE      | DESCRIPTION                 |  | CODE      | DESCRIPTION                        |  |
|-----------|---------------------------------|--|-----------|-----------------------------|--|-----------|------------------------------------|--|
| AT140-001 | Drain valve housing             |  | OR025-005 | O-ring                      |  | PA100-123 | Extension filter                   |  |
| AT140-100 | Condensate drain valve complete |  | OR066-010 | O-ring                      |  | PA100-149 | Pipe fitting whit not return valve |  |
| AT141-001 | Rilsan nut                      |  | OR068-005 | O-ring                      |  | PA110-102 | Safety valve PN 200 bar            |  |
| AT142-001 | Black screw of discharge        |  | PA100-050 | Maintaining valve insert    |  | PA110-103 | Safety valve PN 300 bar            |  |
| AT142-002 | Drain out                       |  | PA100-051 | Piston maintaining valve    |  | PA114-047 | Connection                         |  |
| HR101-004 | Ogive                           |  | PA100-052 | Spring guide                |  | PA114-148 | Connection                         |  |
| HR102-014 | Nut fitting pipe                |  | PA100-053 | Closure plug                |  | PA115-116 | Spring no return valve             |  |
| HR161-014 | Pipe fitting "L"                |  | PA100-054 | Nut                         |  | PA115-119 | Piston no return valve             |  |
| HR176-002 | Closure plug                    |  | PA100-060 | Maintaining valve complete  |  | VB008-080 | Screw                              |  |
| HR701-012 | Washer                          |  | PA100-201 | Filter cartridge - electric |  | VR006-015 | Washer spring                      |  |
| OR002-005 | O-ring                          |  | PA100-202 | Filter cartridge - gasoline |  | VV005-015 | Sphere                             |  |
| OR003-005 | O-ring                          |  | PA100-213 | Filter housing              |  |           |                                    |  |
| OR009-005 | O-ring                          |  | PA100-114 | Head filter housing         |  |           |                                    |  |
| OR009-010 | O-ring                          |  | PA100-115 | Nozzle                      |  |           |                                    |  |
| OR011-004 | O-ring                          |  | PA100-117 | Base filter                 |  |           |                                    |  |

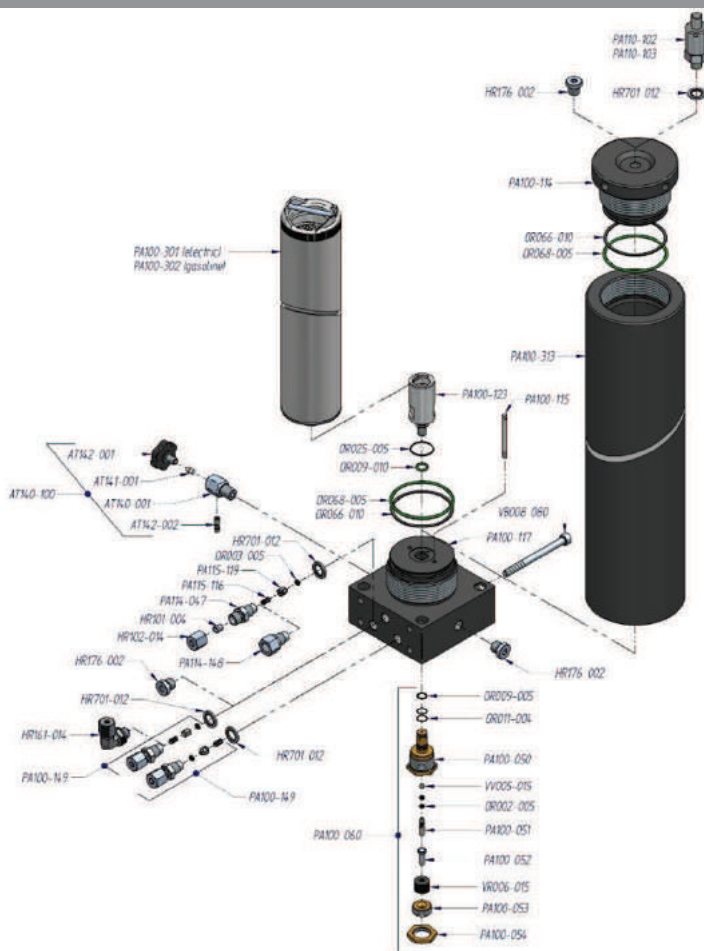 


| CODE      | DESCRIPTION                     | CODE      | DESCRIPTION                 | CODE      | DESCRIPTION                        |
|-----------|---------------------------------|-----------|-----------------------------|-----------|------------------------------------|
| AT140-001 | Drain valve housing             | OR025-005 | O-ring                      | PA100-123 | Extension filter                   |
| AT140-100 | Condensate drain valve complete | OR066-010 | O-ring                      | PA100-149 | Pipe fitting whit not return valve |
| AT141-001 | Rilsan nut                      | OR068-005 | O-ring                      | PA110-102 | Safety valve PN 200 bar            |
| AT142-001 | Black screw of discharge        | PA100-050 | Maintaining valve insert    | PA110-103 | Safety valve PN 300 bar            |
| AT142-002 | Drain out                       | PA100-051 | Piston maintaining valve    | PA114-047 | Connection                         |
| HR101-004 | Ogive                           | PA100-052 | Spring guide                | PA114-148 | Connection                         |
| HR102-014 | Nut fitting pipe                | PA100-053 | Closure plug                | PA115-116 | Spring no return valve             |
| HR161-014 | Pipe fitting "L"                | PA100-054 | Nut                         | PA115-119 | Piston no return valve             |
| HR176-002 | Closure plug                    | PA100-060 | Maintaining valve complete  | VB008-080 | Screw                              |
| HR701-012 | Washer                          | PA100-301 | Filter cartridge - electric | VR006-015 | Washer spring                      |
| OR002-005 | O-ring                          | PA100-302 | Filter cartridge - gasoline | VV005-015 | Sphere                             |
| OR003-005 | O-ring                          | PA100-313 | Filter housing              |           |                                    |
| OR009-005 | O-ring                          | PA100-114 | Head filter housing         |           |                                    |
| OR009-010 | O-ring                          | PA100-115 | Nozzle                      |           |                                    |
| OR011-004 | O-ring                          | PA100-117 | Base filter                 |           |                                    |

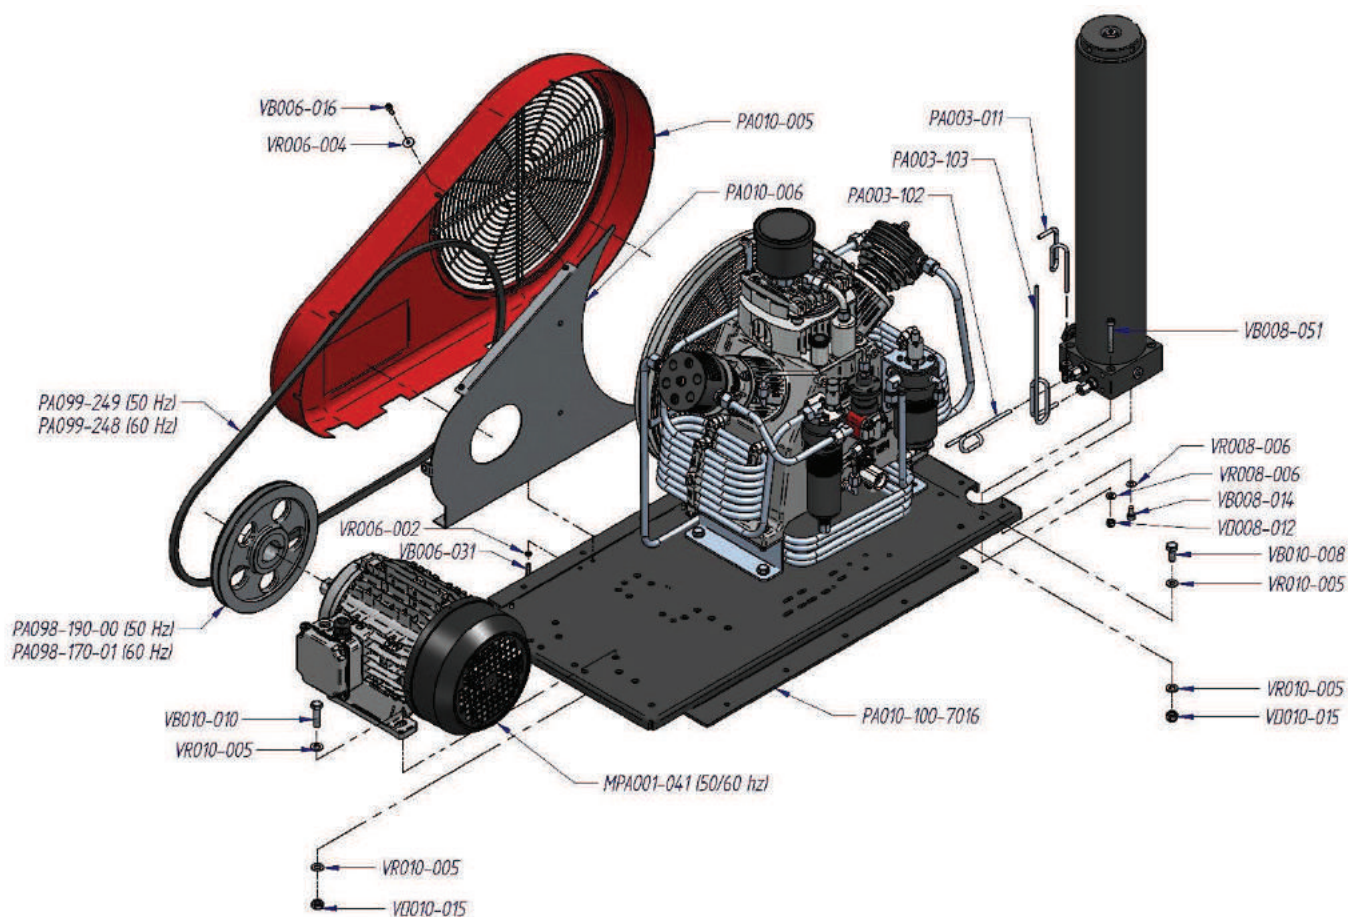 


| CODE           | DESCRIPTION           | CODE         | DESCRIPTION | CODE      | DESCRIPTION |
|----------------|-----------------------|--------------|-------------|-----------|-------------|
| MPA001-041     | Electric motor 5,5 Hp | PA098-190-00 | Pulley      | VB010-010 | Screw       |
| PA003-011      | Tube                  | PA099-248    | Belt        | VD008-012 | Nut         |
| PA003-102      | Tube                  | PA099-249    | Belt        | VD010-015 | Nut         |
| PA003-101      | Tube                  | VB006-016    | Screw       | VR006-002 | Washer      |
| PA010-005      | Cover fan             | VB006-031    | Screw       | VR006-004 | Washer      |
| PA010-006      | Metal Cover fan       | VB008-014    | Screw       | VR008-006 | Washer      |
| PA010-100-7016 | Frame                 | VB008-051    | Screw       | VR010-005 | Washer      |
| PA098-170-01   | Pulley                | VB010-008    | Screw       |           |             |

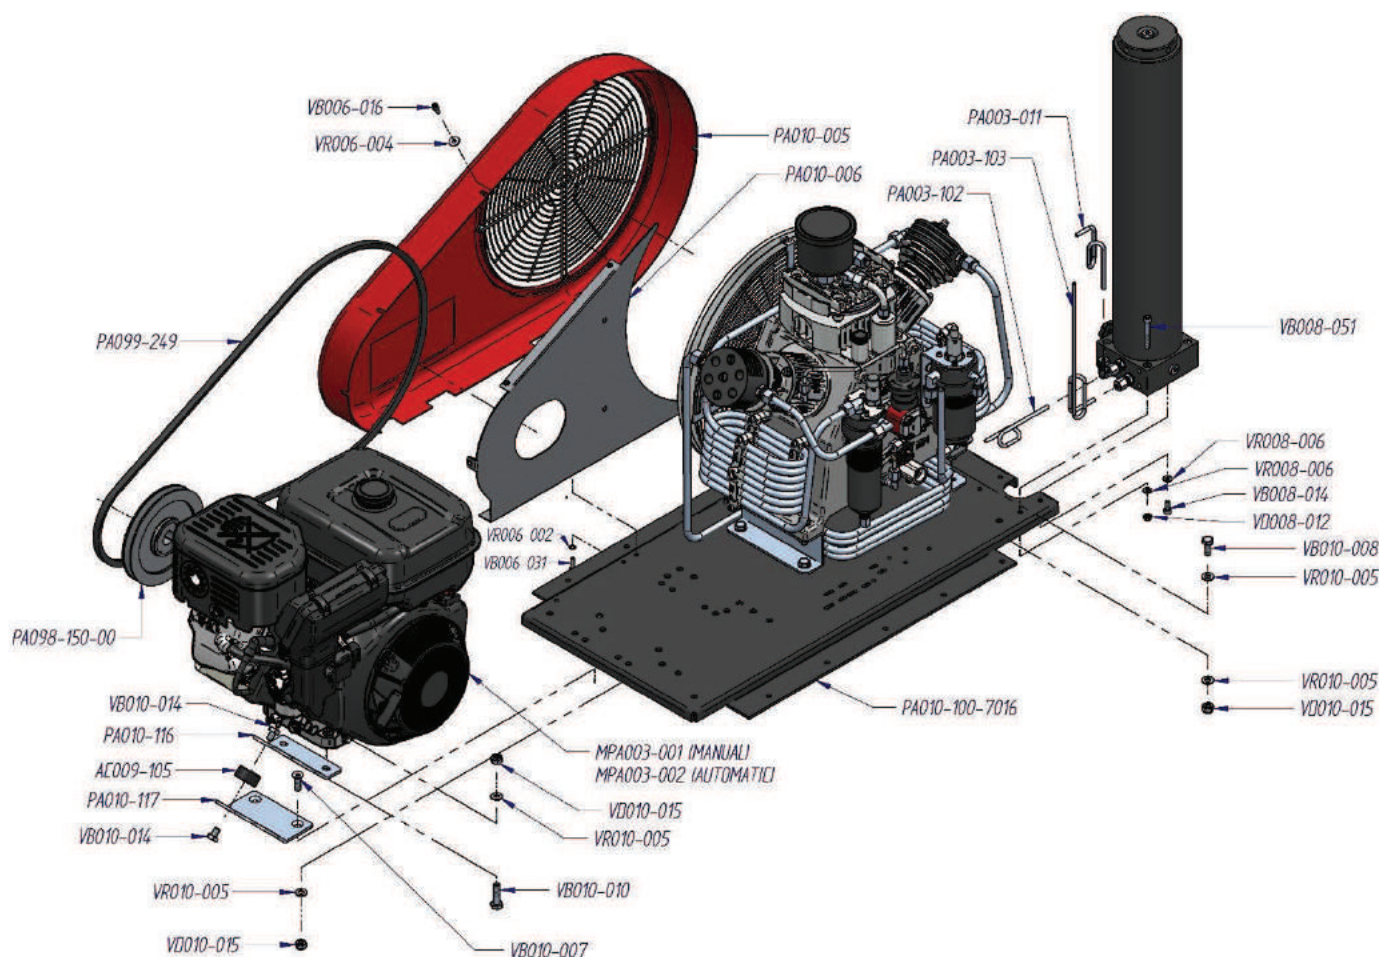 


| CODE           | DESCRIPTION               | CODE         | DESCRIPTION | CODE      | DESCRIPTION |
|----------------|---------------------------|--------------|-------------|-----------|-------------|
| AC009-105      | Antivibration             | PA010-116    | Support     | VB010-010 | Screw       |
| MPA003-001     | Gasoline engine manual    | PA010-117    | Support     | VB010-014 | Screw       |
| MPA003-002     | Gasoline engine automatic | PA098-150-00 | Pulley      | VD008-012 | Nut         |
| PA003-011      | Tube                      | PA099-249    | Belt        | VD010-015 | Nut         |
| PA003-101      | Tube                      | VB006-016    | Screw       | VR006-002 | Washer      |
| PA003-102      | Tube                      | VB006-031    | Screw       | VR006-004 | Washer      |
| PA010-005      | Cover fan                 | VB008-014    | Screw       | VR008-006 | Washer      |
| PA010-006      | Metal Cover fan           | VB008-051    | Screw       | VR010-005 | Washer      |
| PA010-100-7016 | Frame                     | VB010-007    | Screw       |           |             |

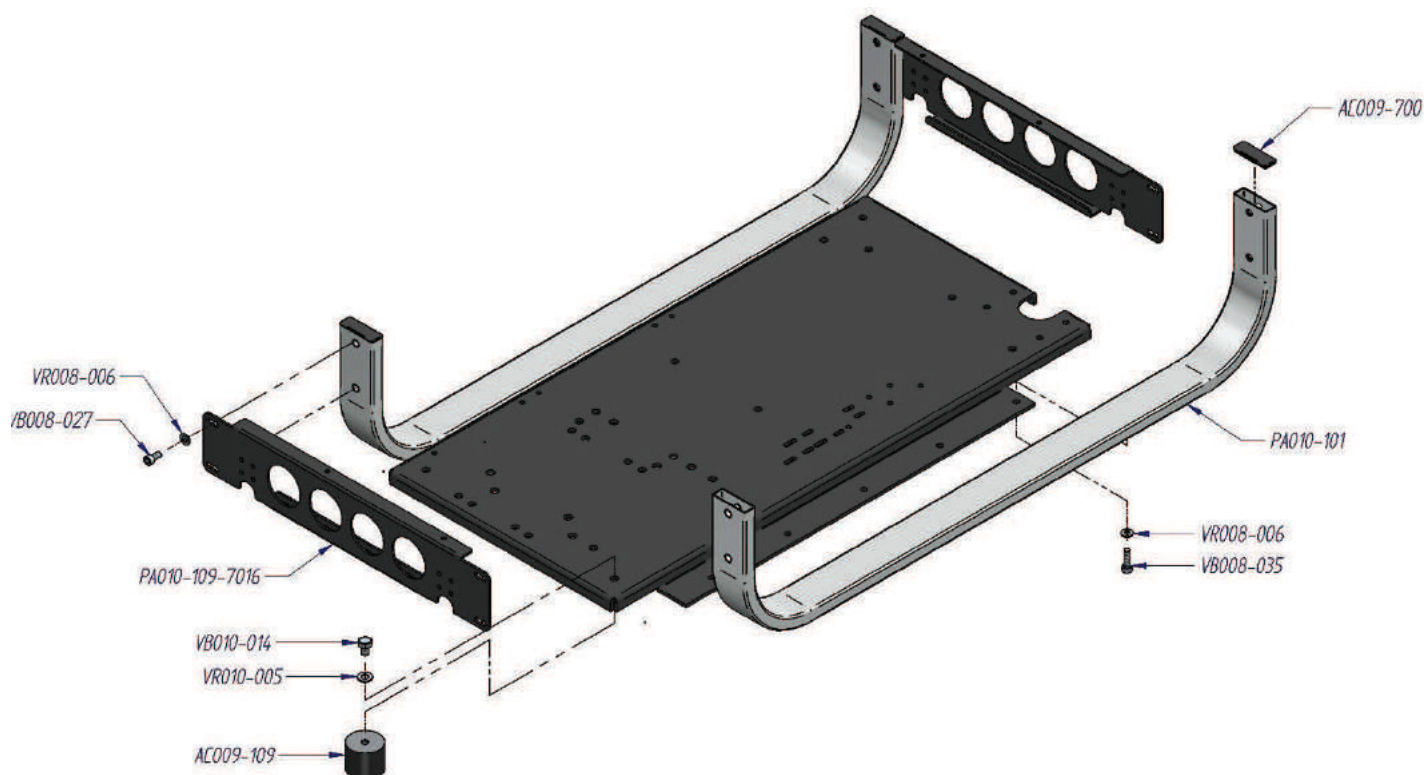 


| CODE      | DESCRIPTION      | CODE           | DESCRIPTION | CODE      | DESCRIPTION |
|-----------|------------------|----------------|-------------|-----------|-------------|
| AC009-109 | Plug with thread | PA010-109-7016 | Frame       | VB010-014 | Screw       |
| AC009-700 | Closure          | VB008-027      | Screw       | VR008-006 | Washer      |
| PA010-101 | Frame            | VB008-035      | Screw       | VR010-050 | Washer      |

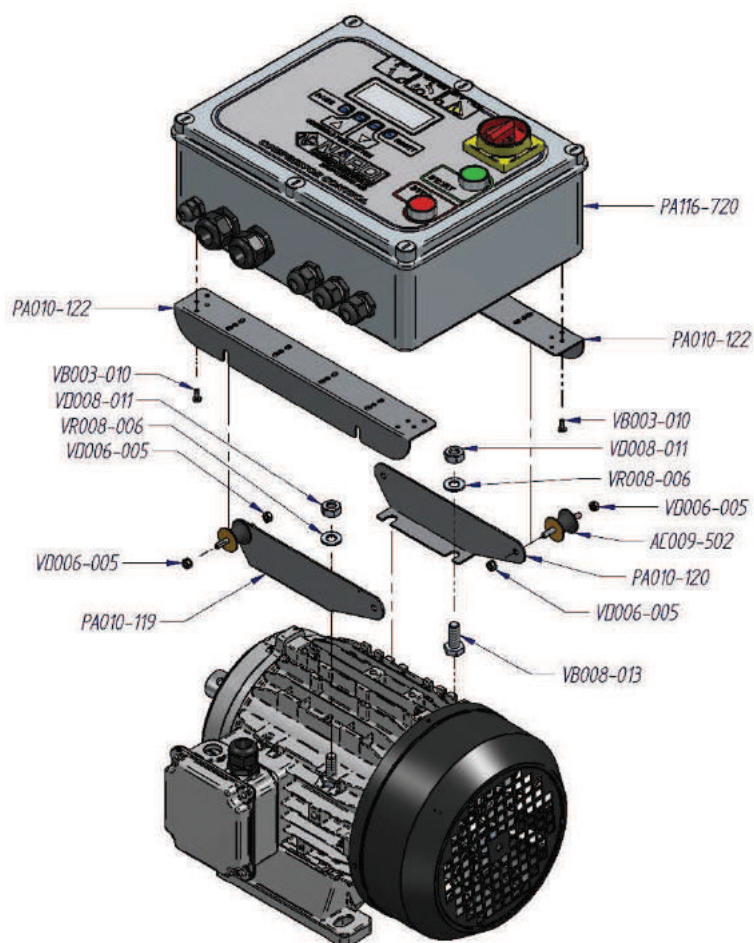 


| CODE      | DESCRIPTION         | CODE      | DESCRIPTION    | CODE      | DESCRIPTION |
|-----------|---------------------|-----------|----------------|-----------|-------------|
| AC009-502 | No-vibration rubber | PA116-720 | Electrical box | VD008-011 | Nut         |
| PA010-119 | Support             | VB003-010 | Screw          | VR008-006 | Washer      |
| PA010-120 | Support             | VB008-013 | Screw          |           |             |
| PA010-122 | Support             | VD006-005 | Nut            |           |             |

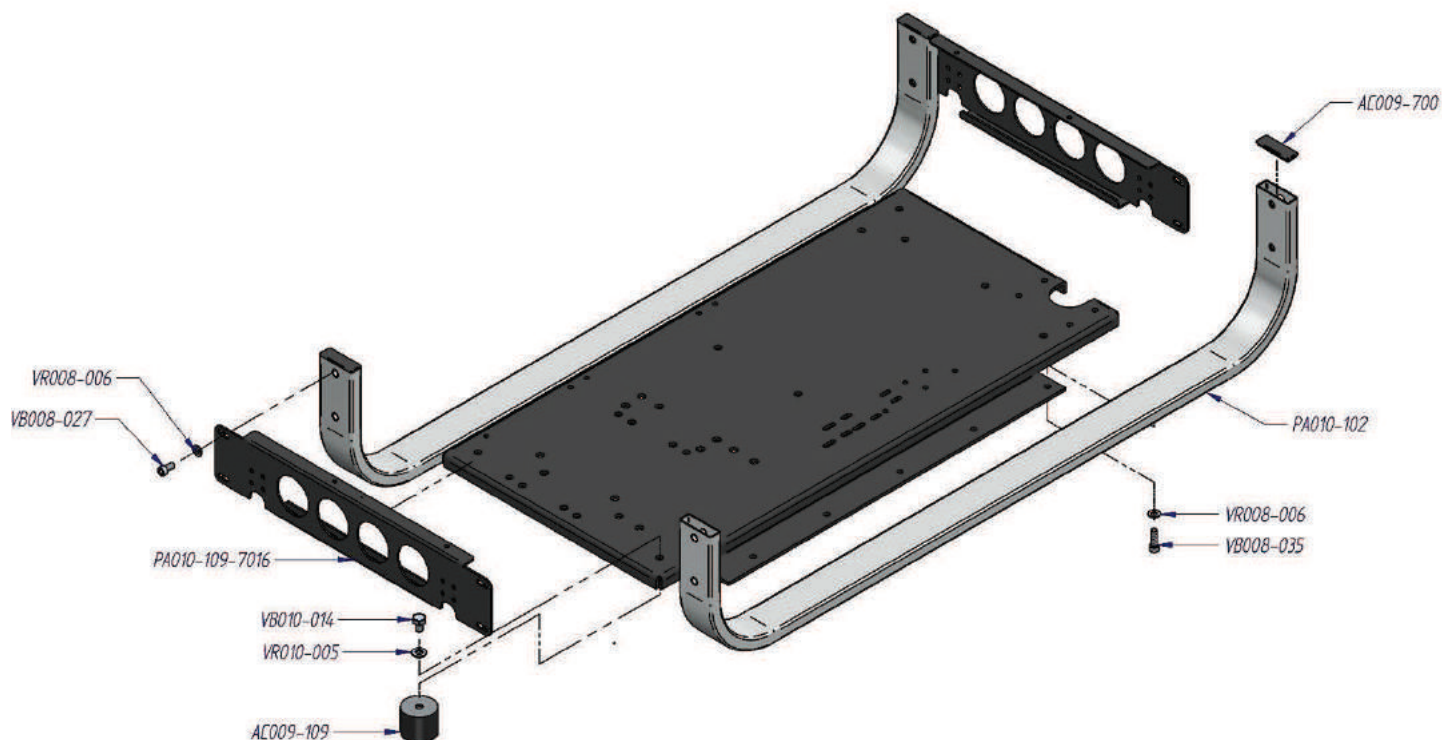 


| CODE      | DESCRIPTION       | CODE           | DESCRIPTION | CODE      | DESCRIPTION |
|-----------|-------------------|----------------|-------------|-----------|-------------|
| AC009-109 | Plug whith thread | PA010-109-7016 | Frame       | VB010-014 | Screw       |
| AC009-700 | Closure           | VB008-027      | Screw       | VR008-006 | Washer      |
| PA010-102 | Frame             | VB008-035      | Screw       | VR010-050 | Washer      |

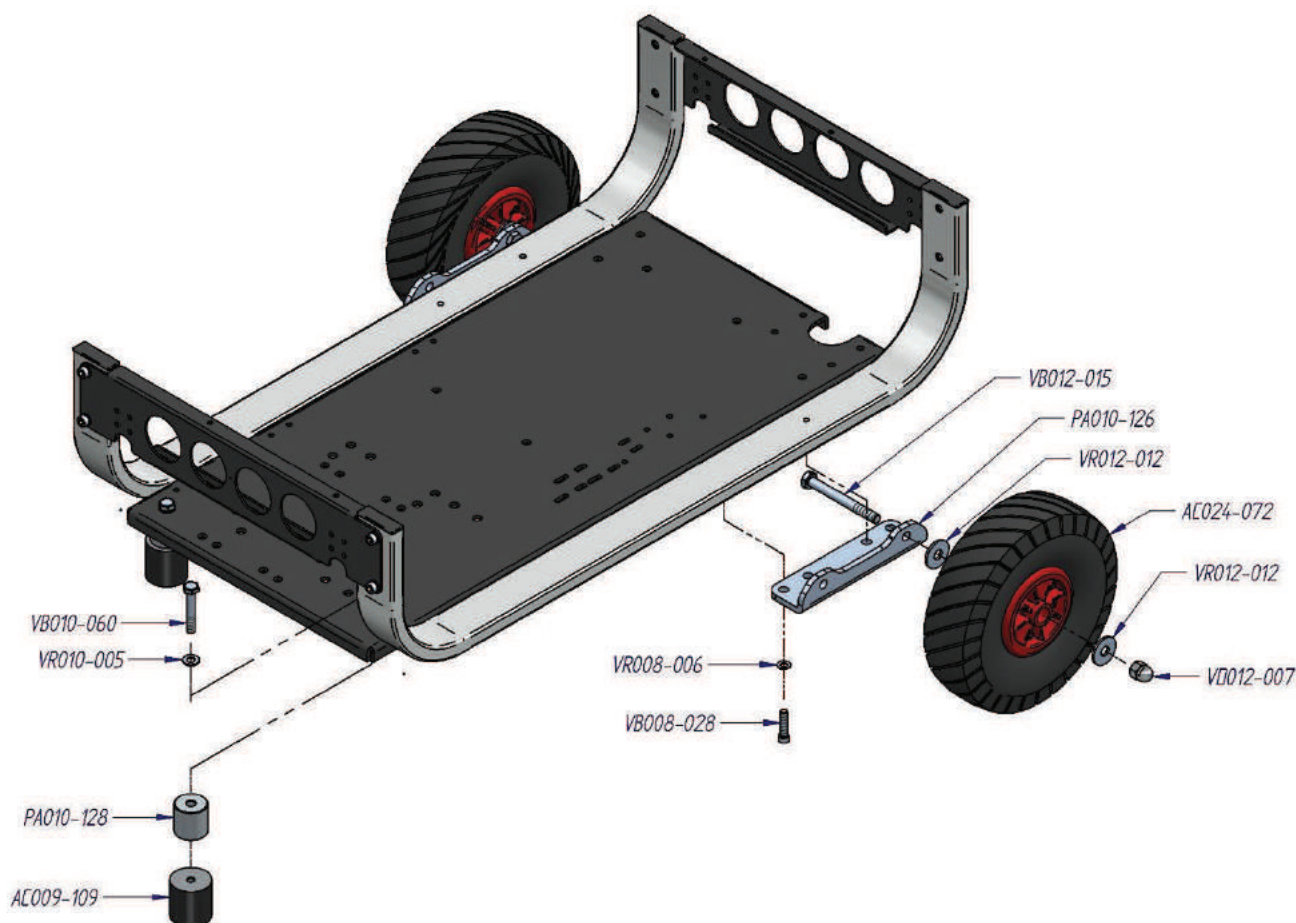 


| CODE      | DESCRIPTION      | CODE      | DESCRIPTION | CODE      | DESCRIPTION |
|-----------|------------------|-----------|-------------|-----------|-------------|
| AC009-109 | Plug with thread | VB008-028 | Screw       | VR008-006 | Washer      |
| AC024-072 | Wheel            | VB010-060 | Screw       | VR010-005 | Washer      |
| PA010-126 | Support          | VB012-015 | Screw       | VR012-012 | Washer      |
| PA010-128 | Washer           | VD012-007 | Nut         |           |             |

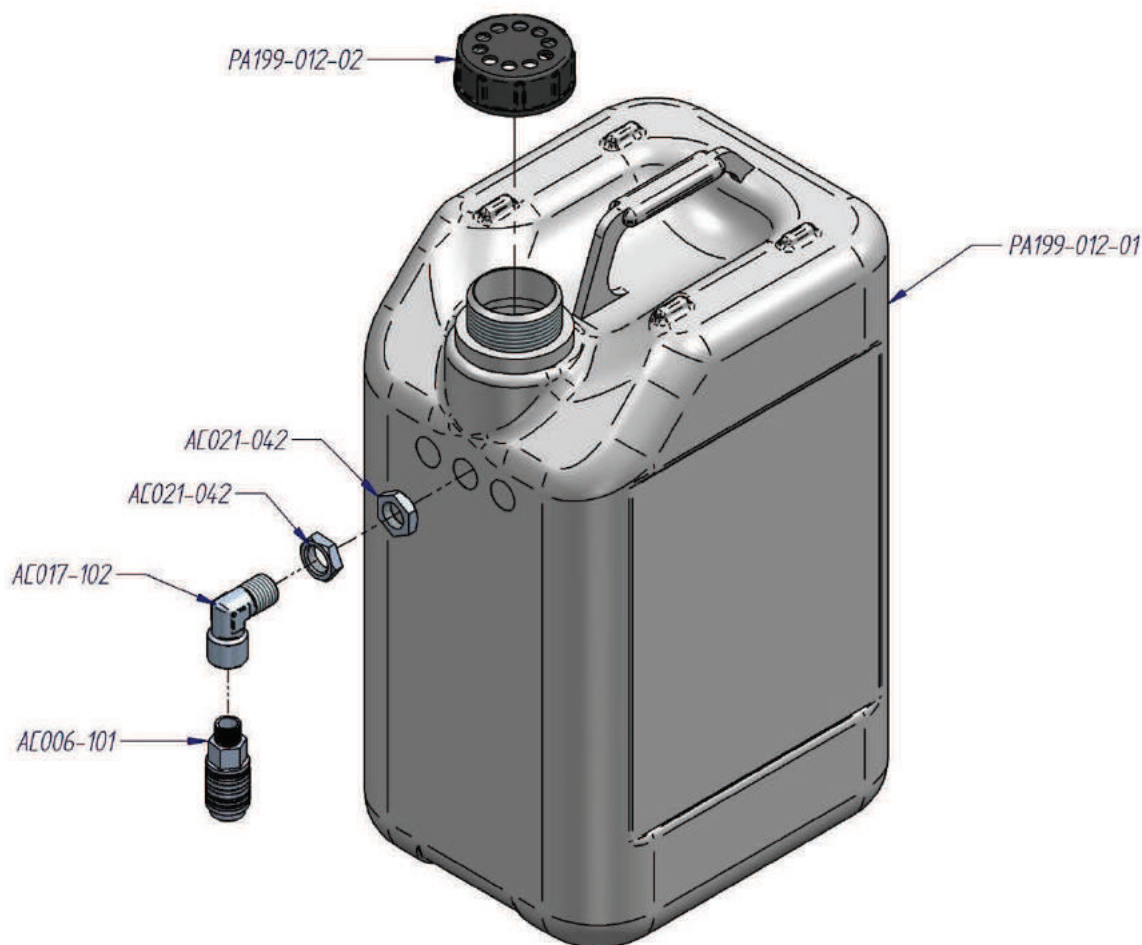 


| CODE      | DESCRIPTION       | CODE         | DESCRIPTION | CODE         | DESCRIPTION |
|-----------|-------------------|--------------|-------------|--------------|-------------|
| AC006-101 | Universal Coupler | AC021-042    | Nut         | PA199-012-02 | Cover       |
| AC017-102 | Pipe fitting "L"  | PA199-012-01 | Tank        |              |             |

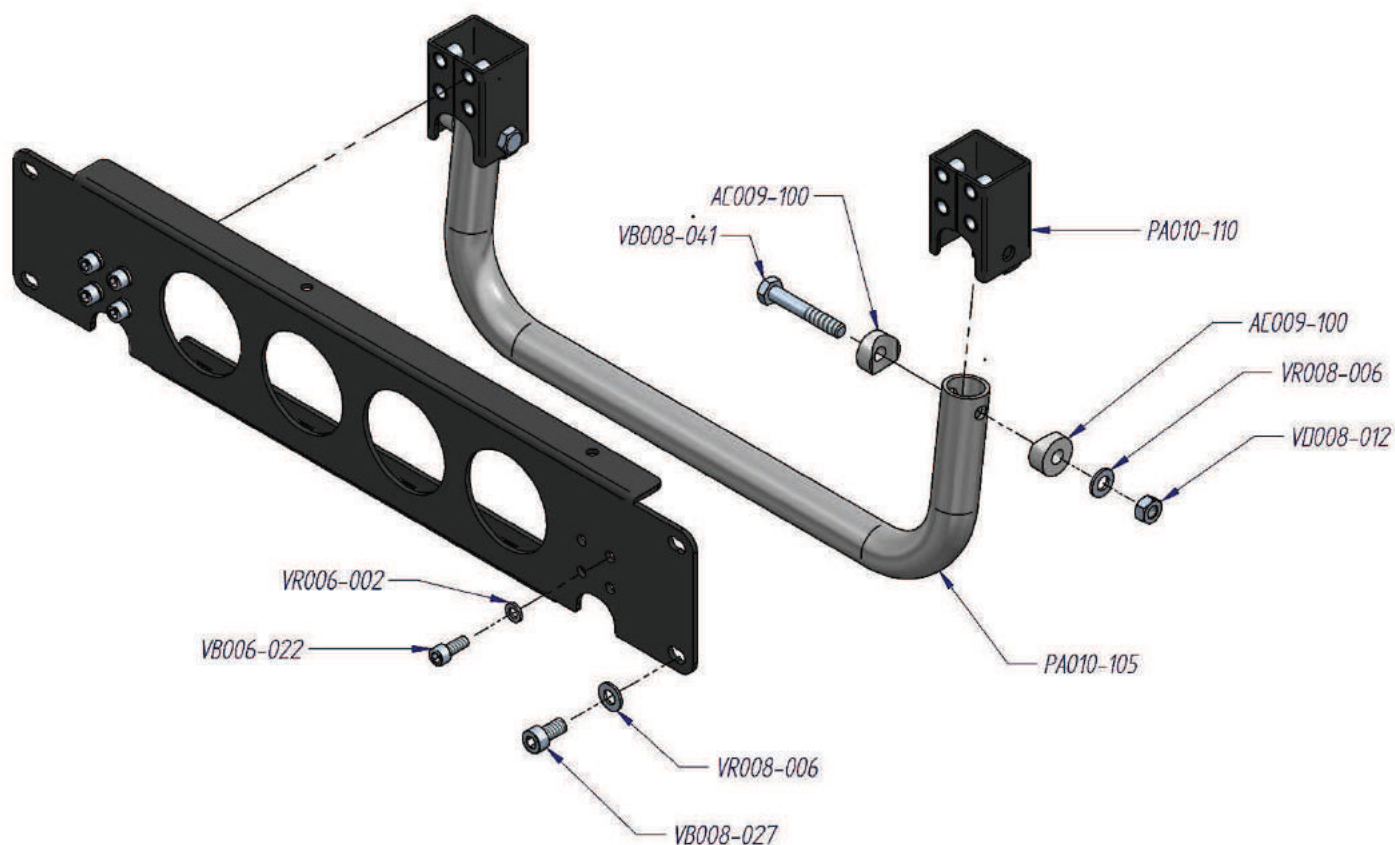 


| CODE      | DESCRIPTION |  | CODE      | DESCRIPTION |  | CODE      | DESCRIPTION |  |
|-----------|-------------|--|-----------|-------------|--|-----------|-------------|--|
| AC009-100 | Flange      |  | VB008-027 | Screw       |  | VR008-006 | Washer      |  |
| PA010-105 | Handle      |  | VB008-041 | Screw       |  |           |             |  |
| PA010-110 | Support     |  | VD008-012 | Nut         |  |           |             |  |
| VB006-022 | Screw       |  | VR006-002 | Washer      |  |           |             |  |

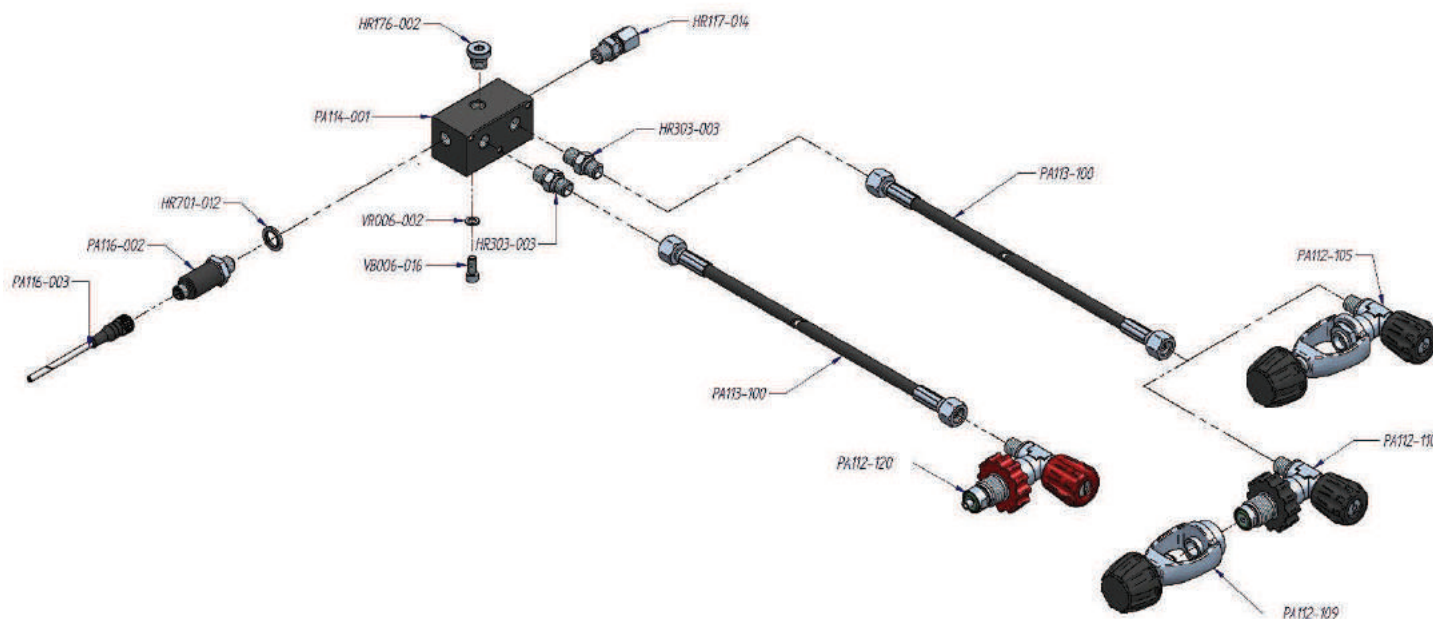 


| CODE      | DESCRIPTION                              | CODE      | DESCRIPTION           | CODE      | DESCRIPTION          |
|-----------|------------------------------------------|-----------|-----------------------|-----------|----------------------|
| HR117-014 | Pipe fitting                             | PA112-105 | Fitting valve INT 200 | PA116-002 | Trasductor           |
| HR176-002 | Clousing plug                            | PA112-110 | Fitting valve DIN 200 | PA116-003 | Cable for trasductor |
| HR303-003 | Connection                               | PA112-120 | Fitting valve DIN 300 | VB006-016 | Screw                |
| HR701-012 | Washer                                   | PA113-100 | Fitting hose          |           |                      |
| PA112-109 | Adapter DIN 200 / INT-CGA 200 Bar - YOKE | PA114-001 | Distridutor 2 exit    |           |                      |

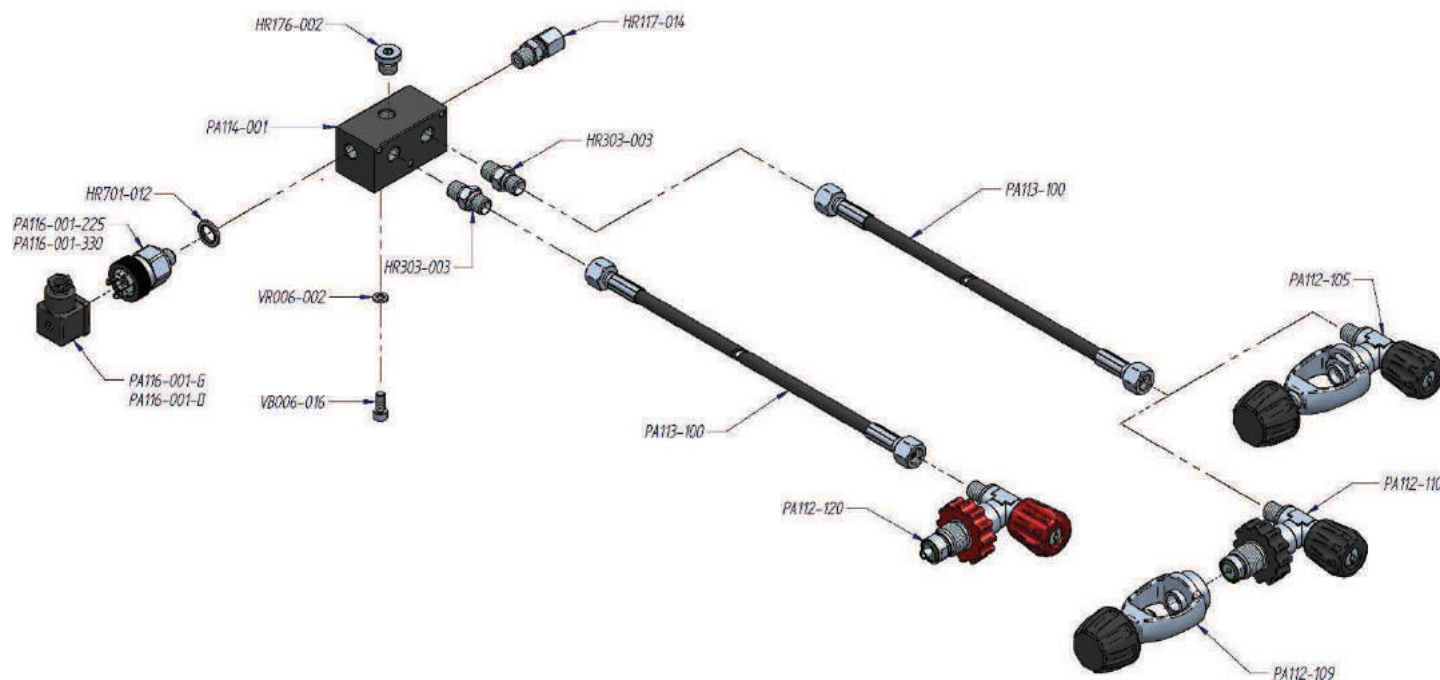 


| CODE      | DESCRIPTION                              | CODE      | DESCRIPTION           | CODE          | DESCRIPTION                       |
|-----------|------------------------------------------|-----------|-----------------------|---------------|-----------------------------------|
| HR117-014 | Pipe fitting                             | PA112-105 | Fitting valve INT 200 | PA116-001-225 | Pressure switch 225 bar           |
| HR176-002 | Closing plug                             | PA112-110 | Fitting valve DIN 200 | PA116-001-330 | Pressure switch 225 bar           |
| HR303-003 | Connection                               | PA112-120 | Fitting valve DIN 300 | PA116-001-D   | Connector with cable for Diesel   |
| HR701-012 | Washer                                   | PA113-100 | Fitting hose          | PA116-001-G   | Connector with cable for Gasoline |
| PA112-109 | Adapter DIN 200 / INT-CGA 200 Bar - YOKE | PA114-001 | Distributor 2 exit    | VR006-016     | Screw                             |

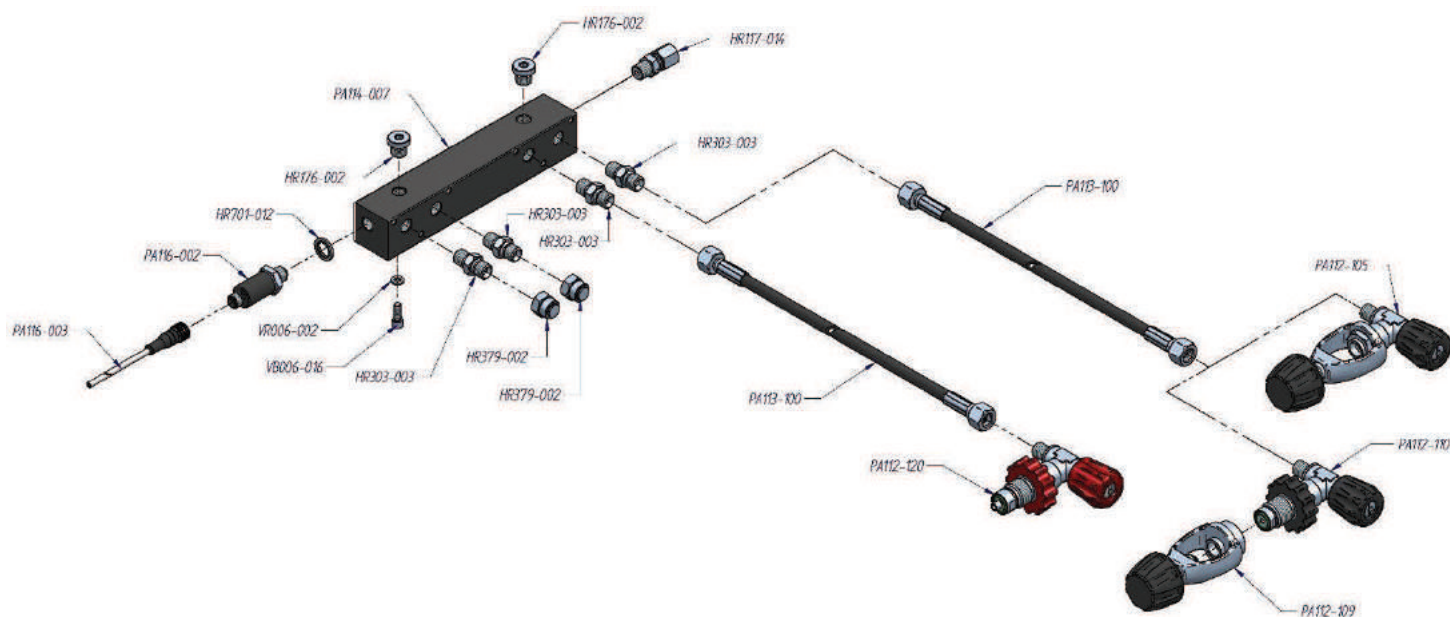 


| CODE      | DESCRIPTION   | CODE      | DESCRIPTION                              | CODE      | DESCRIPTION          |
|-----------|---------------|-----------|------------------------------------------|-----------|----------------------|
| HR117-014 | Pipe fitting  | PA112-109 | Adapter DIN 200 / INT-CGA 200 Bar - YOKE | PA114-007 | Distributore 4 exit  |
| HR176-002 | Clousing plug | PA112-105 | Fitting valve INT 200                    | PA116-002 | Trasductor           |
| HR303-003 | Connection    | PA112-110 | Fitting valve DIN 200                    | PA116-003 | Cable for trasductor |
| HR379-002 | Clousing plug | PA112-120 | Fitting valve DIN 300                    | VB006-016 | Screw                |
| HR701-012 | Washer        | PA113-100 | Fitting hose                             |           |                      |

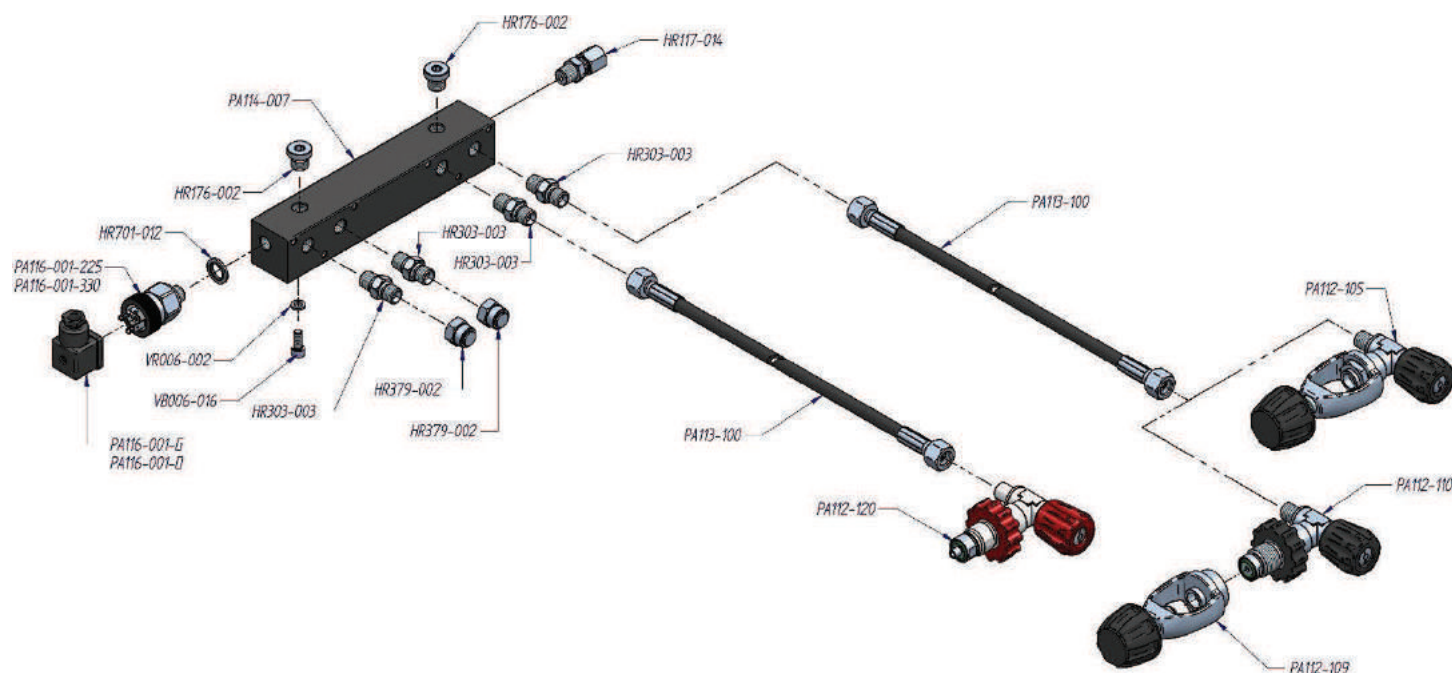 


| CODE      | DESCRIPTION                              | CODE          | DESCRIPTION            | CODE          | DESCRIPTION                       |
|-----------|------------------------------------------|---------------|------------------------|---------------|-----------------------------------|
| HR117-014 | Pipe fitting                             | PA112-105     | Fitting valve INT 200  | PA116-001-330 | Pressure swich 225 bar            |
| HR176-002 | Closuring plug                           | PA112-110     | Fitting valve DIN 200  | PA116-001-D   | Connector with cable for Gasoline |
| HR303-003 | Connection                               | PA112-120     | Fitting valve DIN 300  | PA116-001-G   | Connector with cable for Diesel   |
| HR379-002 | Closuring plug                           | PA113-100     | Fitting hose           | VB006-016     | Screw                             |
| HR701-012 | Washer                                   | PA114-007     | Distridutor 4 exit     |               |                                   |
| PA112-109 | Adapter DIN 200 / INT-CGA 200 Bar - YOKE | PA116-001-225 | Pressure swich 225 bar |               |                                   |

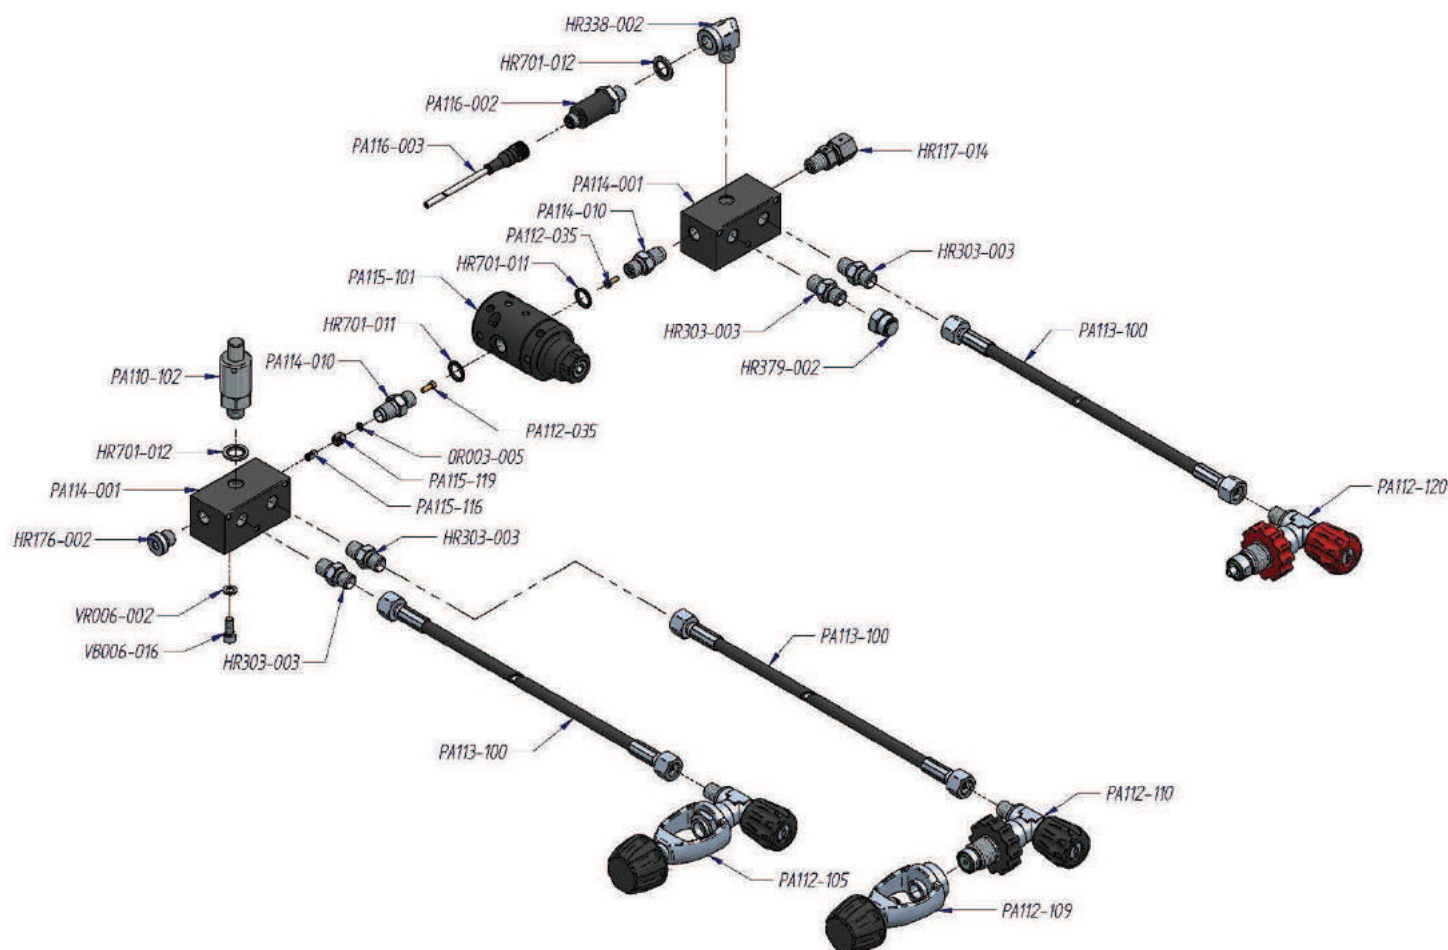 


| CODE      | DESCRIPTION             | CODE      | DESCRIPTION                              | CODE      | DESCRIPTION            |
|-----------|-------------------------|-----------|------------------------------------------|-----------|------------------------|
| HR117-014 | Pipe fitting            | PA112-035 | Filter                                   | PA115-101 | Reductor high pressure |
| HR176-002 | Closing plug            | PA112-105 | Fitting valve INT 200                    | PA115-116 | Spring no return valve |
| HR303-003 | Connection              | PA112-109 | Adapter DIN 200 / INT-CGA 200 Bar - YOKE | PA115-119 | Piston no return valve |
| HR338-002 | Pipe fitting "L"        | PA112-105 | Fitting valve INT 200                    | PA116-002 | Trasductor             |
| HR379-002 | Closing plug            | PA112-110 | Fitting valve DIN 200                    | PA116-003 | Cable for trasductor   |
| HR701-011 | Washer                  | PA112-120 | Fitting valve DIN 300                    | VB006-016 | Screw                  |
| HR701-012 | Washer                  | PA113-100 | Fitting hose                             |           |                        |
| OR003-005 | O-ring                  | PA114-001 | Distridutor 2 exit                       |           |                        |
| PA110-102 | Safety valve PN 200 bar | PA114-010 | Connection                               |           |                        |

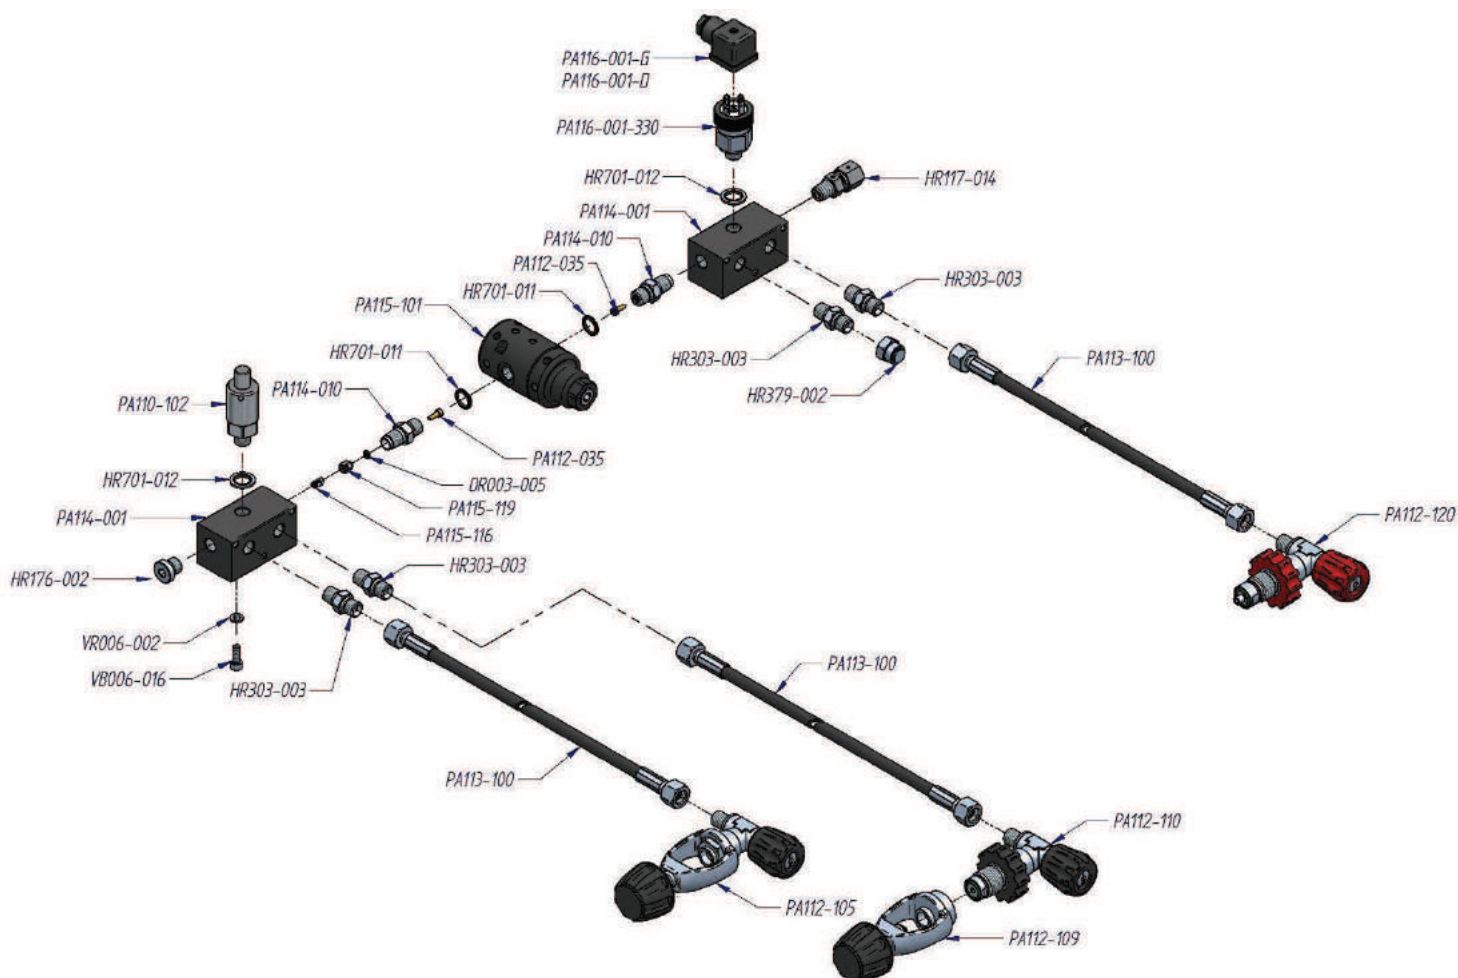 


| CODE      | DESCRIPTION             | CODE      | DESCRIPTION                              | CODE          | DESCRIPTION                       |
|-----------|-------------------------|-----------|------------------------------------------|---------------|-----------------------------------|
| HR117-014 | Pipe fitting            | PA112-035 | Filter                                   | PA115-101     | Reductor high pressure            |
| HR176-002 | Closing plug            | PA112-105 | Fitting valve INT 200                    | PA115-116     | Spring no return valve            |
| HR303-003 | Connection              | PA112-109 | Adapter DIN 200 / INT-CGA 200 Bar - YOKE | PA115-119     | Piston no return valve            |
| HR338-002 | Pipe fitting "L"        | PA112-105 | Fitting valve INT 200                    | PA116-001-330 | Pressure swich 225 bar            |
| HR379-002 | Closing plug            | PA112-110 | Fitting valve DIN 200                    | PA116-001-D   | Connector with cable for Diesel   |
| HR701-011 | Washer                  | PA112-120 | Fitting valve DIN 300                    | PA116-001-G   | Connector with cable for Gasoline |
| HR701-012 | Washer                  | PA113-100 | Fitting hose                             | VB006-016     | Screw                             |
| OR003-005 | O-ring                  | PA114-001 | Distridutor 2 exit                       |               |                                   |
| PA110-102 | Safety valve PN 200 bar | PA114-010 | Connection                               |               |                                   |

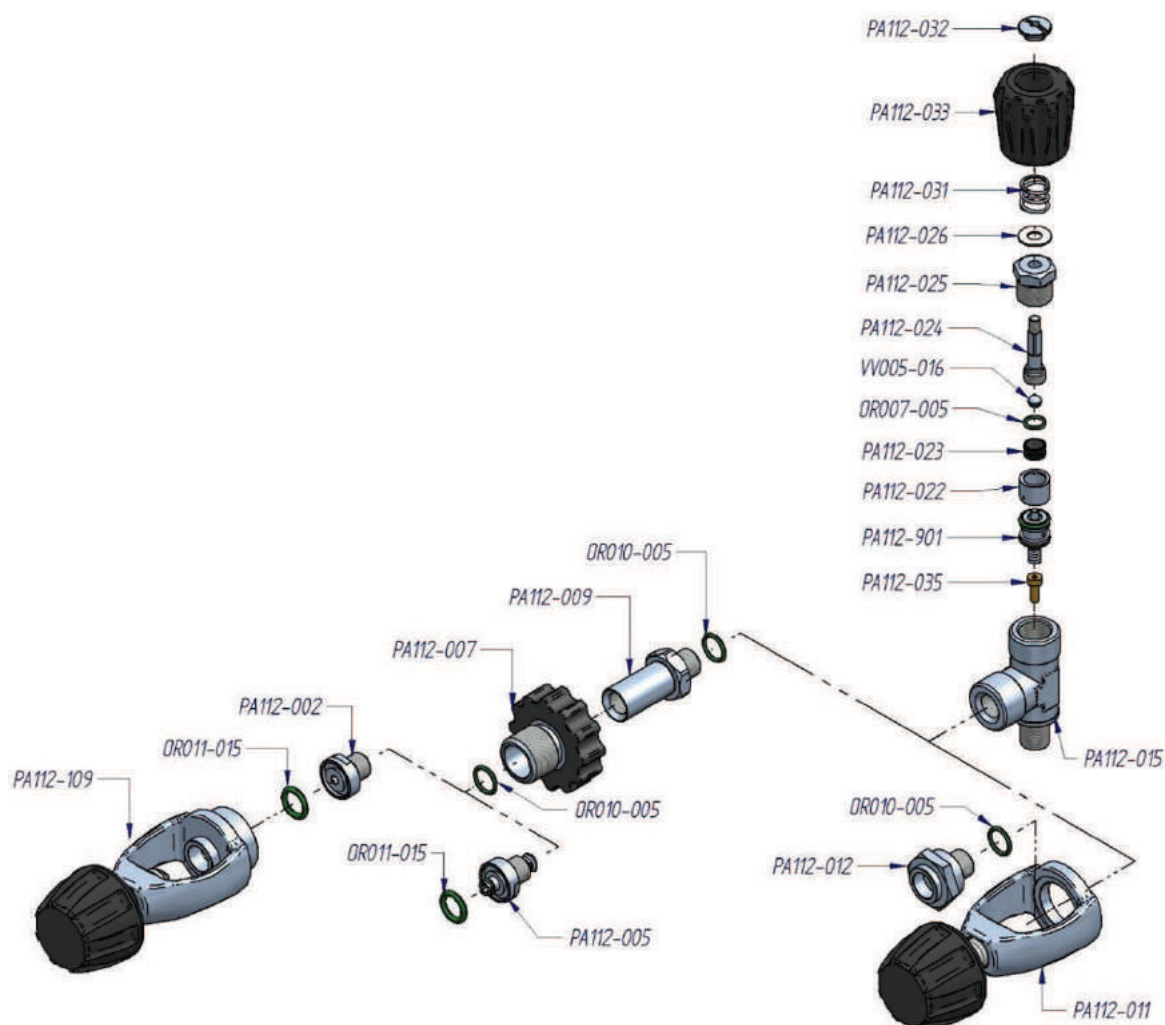 


| CODE      | DESCRIPTION                          | CODE      | DESCRIPTION            | CODE      | DESCRIPTION                      |
|-----------|--------------------------------------|-----------|------------------------|-----------|----------------------------------|
| OR007-005 | O-ring                               | PA112-012 | Bracket blocks INT-CGA | PA112-032 | Nut                              |
| OR010-005 | O-ring                               | PA112-015 | Body valve             | PA112-033 | Rubber knob black 200 bar        |
| OR011-015 | O-ring                               | PA112-022 | Cylindrical guide      | PA112-035 | Filter                           |
| PA112-002 | Fitting connection 200 BAR           | PA112-023 | Piston valve insert    | PA112-109 | International connection INT-CGA |
| PA112-005 | Fitting connection 200 BAR flow stop | PA112-024 | Valve shaft            | PA112-901 | Kit pressure valve               |
| PA112-007 | Knob DIN 200 black                   | PA112-025 | Closure nut            | VV005-015 | Sphere                           |
| PA112-009 | Knob guide DIN 200                   | PA112-026 | Washer                 |           |                                  |
| PA112-011 | International connection INT-CGA     | PA112-031 | Spring                 |           |                                  |

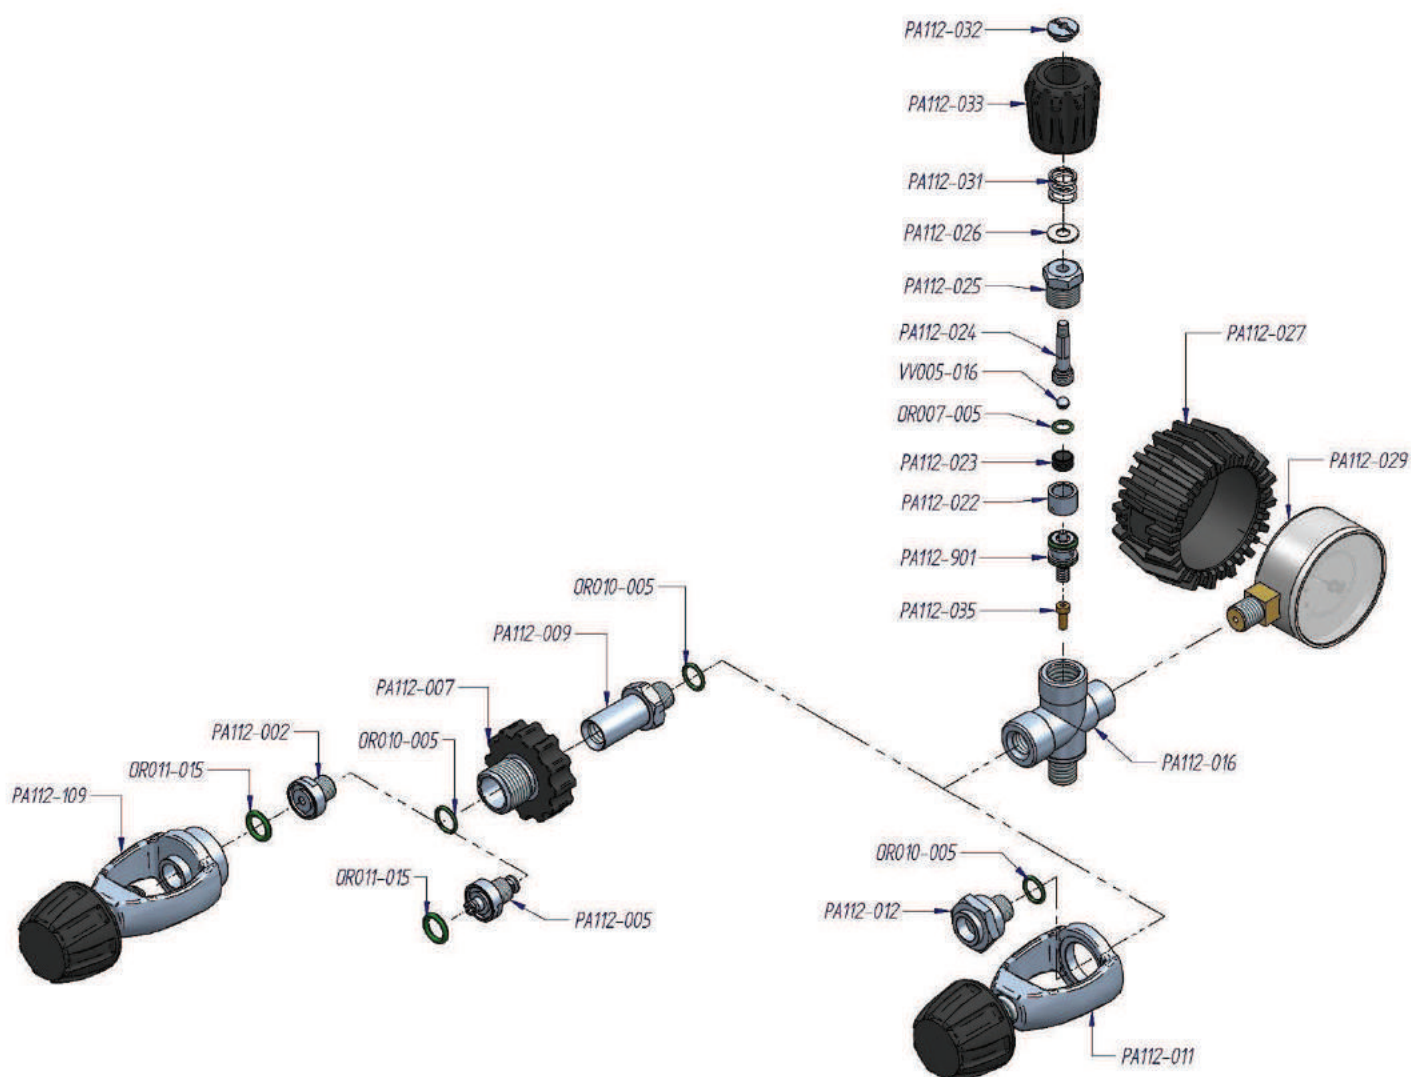 


| CODE      | DESCRIPTION                          | CODE      | DESCRIPTION                     | CODE      | DESCRIPTION                      |
|-----------|--------------------------------------|-----------|---------------------------------|-----------|----------------------------------|
| OR007-005 | O-ring                               | PA112-016 | Body valve                      | PA112-032 | Nut                              |
| OR010-005 | O-ring                               | PA112-022 | Cylindrical guide               | PA112-033 | Rubber knob black 200 bar        |
| OR011-015 | O-ring                               | PA112-023 | Piston valve insert             | PA112-035 | Filter                           |
| PA112-002 | Fitting connection 200 BAR           | PA112-024 | Valve shaft                     | PA112-109 | International connection INT-CGA |
| PA112-005 | Fitting connection 200 BAR flow stop | PA112-025 | Closure nut                     | PA112-901 | Kit pressure valve               |
| PA112-007 | Knob DIN 200 black                   | PA112-026 | Washer                          | VV005-015 | Sphere                           |
| PA112-009 | Knob guide DIN 200                   | PA112-027 | Protection rubber black 200 BAR |           |                                  |
| PA112-011 | International connection INT-CGA     | PA112-029 | Pressure gauge 200 BAR          |           |                                  |
| PA112-012 | Bracket blocks INT-CGA               | PA112-031 | Spring                          |           |                                  |

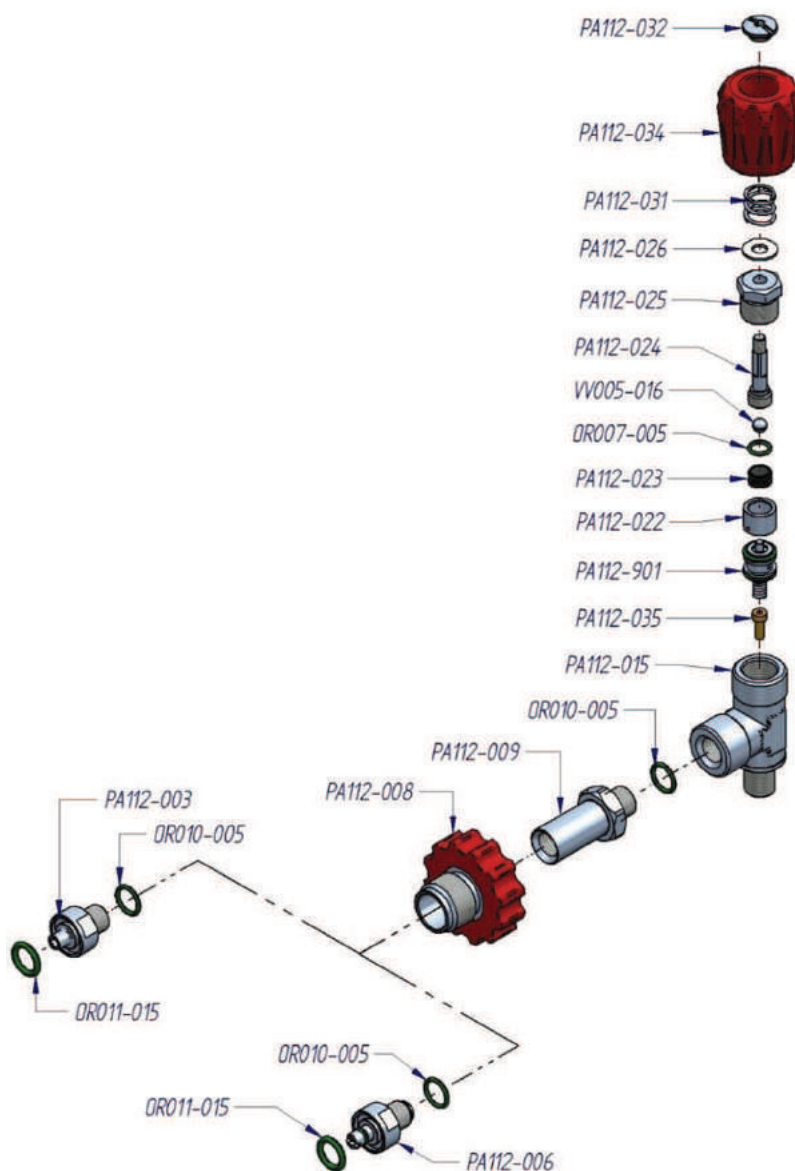 


| CODE      | DESCRIPTION                          | CODE      | DESCRIPTION         | CODE      | DESCRIPTION             |
|-----------|--------------------------------------|-----------|---------------------|-----------|-------------------------|
| OR007-005 | O-ring                               | PA112-015 | Body valve          | PA112-032 | Nut                     |
| OR010-005 | O-ring                               | PA112-022 | Cylindrical guide   | PA112-034 | Rubber knob red 300 bar |
| OR011-015 | O-ring                               | PA112-023 | Piston valve insert | PA112-035 | Filter                  |
| PA112-003 | Fitting connection 300 BAR           | PA112-024 | Valve shaft         | PA112-901 | Kit pressure valve      |
| PA112-006 | Fitting connection 300 BAR flow stop | PA112-025 | Closure nut         | VV005-015 | Sphere                  |
| PA112-008 | Knob DIN 300 red                     | PA112-026 | Washer              |           |                         |
| PA112-009 | Knob guide DIN                       | PA112-031 | Spring              |           |                         |

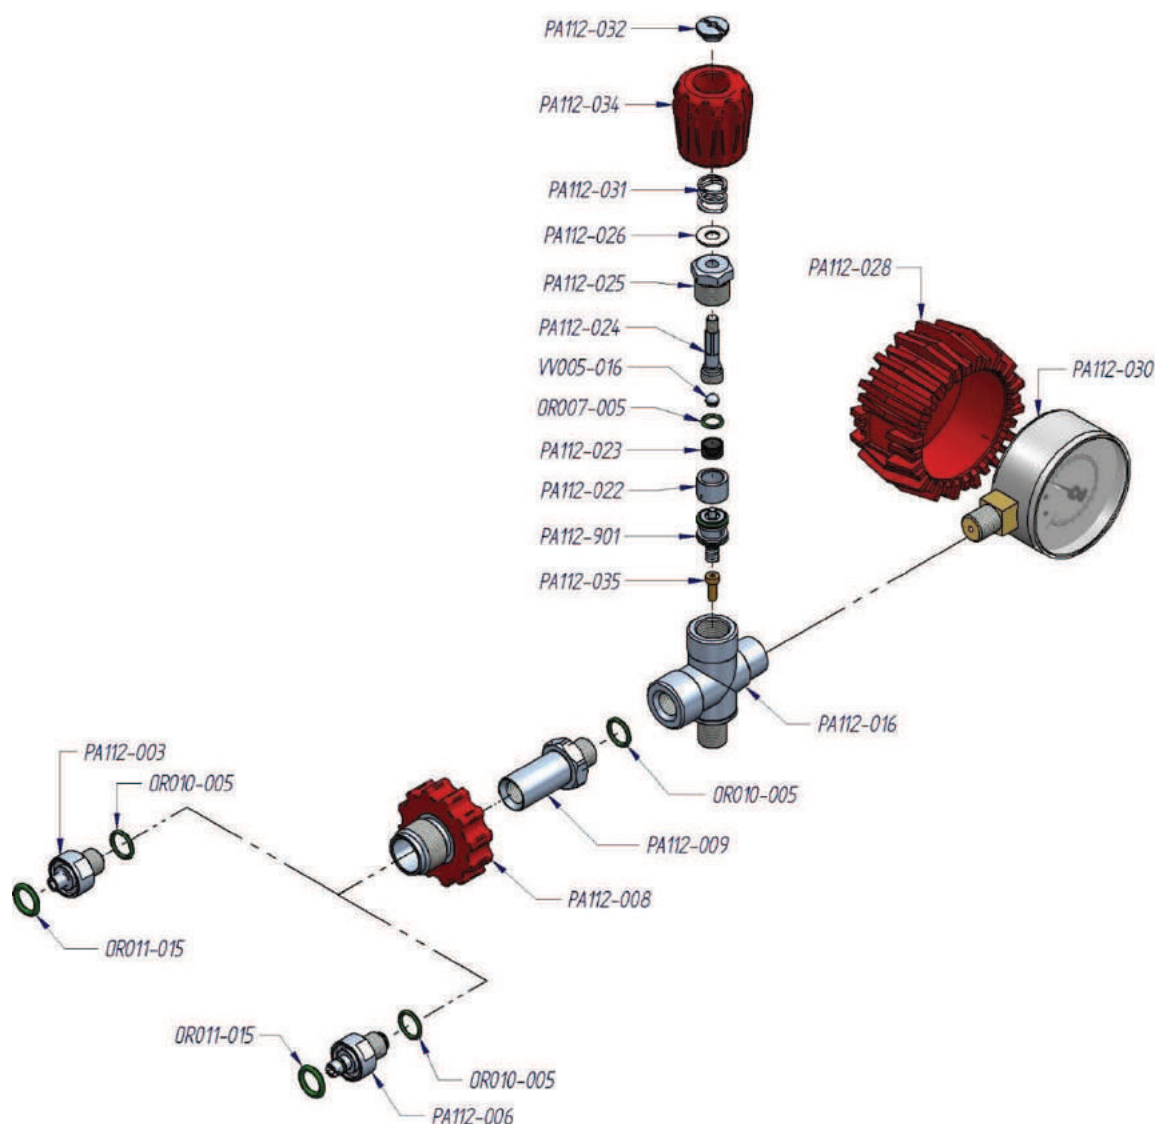 

| CODE      | DESCRIPTION                          | CODE      | DESCRIPTION                   | CODE      | DESCRIPTION             |
|-----------|--------------------------------------|-----------|-------------------------------|-----------|-------------------------|
| OR007-005 | O-ring                               | PA112-016 | Body valve                    | PA112-030 | Pressure gauge 300 BAR  |
| OR010-005 | O-ring                               | PA112-022 | Cylindrical guide             | PA112-031 | Spring                  |
| OR011-015 | O-ring                               | PA112-023 | Piston valve insert           | PA112-032 | Nut                     |
| PA112-003 | Fitting connection 300 BAR           | PA112-024 | Valve shaft                   | PA112-034 | Rubber knob red 300 bar |
| PA112-006 | Fitting connection 300 BAR flow stop | PA112-025 | Closure nut                   | PA112-035 | Filter                  |
| PA112-008 | Knob DIN 300 red                     | PA112-026 | Washer                        | PA112-901 | Kit pressure valve      |
| PA112-009 | Knob guide DIN                       | PA112-028 | Protection rubber red 300 BAR | VV005-016 | Sphere                  |

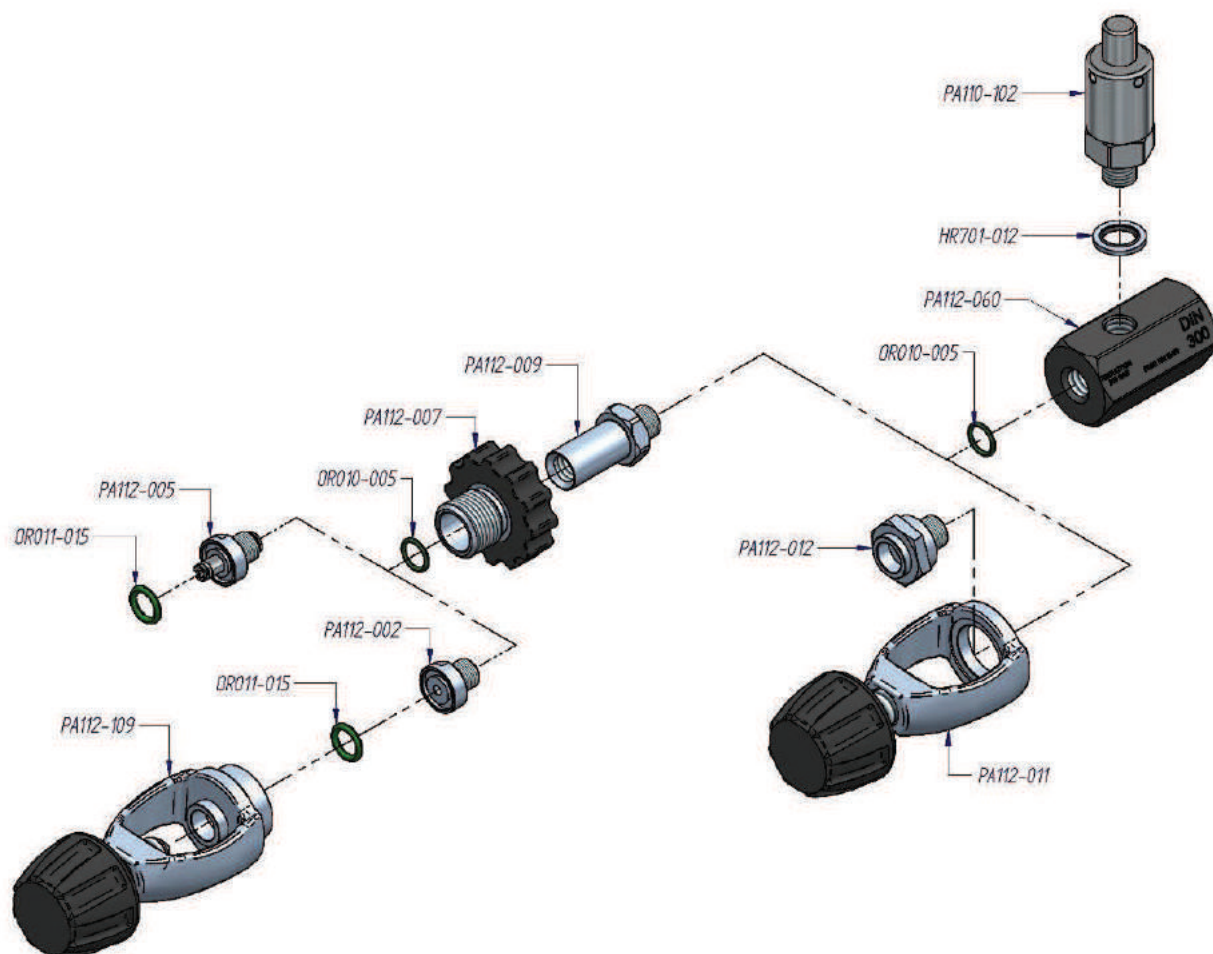 

| CODE      | DESCRIPTION                | CODE      | DESCRIPTION                          | CODE      | DESCRIPTION                      |
|-----------|----------------------------|-----------|--------------------------------------|-----------|----------------------------------|
| HR701-012 | Washer                     | PA112-005 | Fitting connection 200 BAR flow stop | PA112-060 | Reduction Body                   |
| OR010-005 | O-ring                     | PA112-007 | Knob DIN 200 black                   | PA112-109 | International connection INT-CGA |
| OR011-015 | O-ring                     | PA112-009 | Knob guide DIN 200                   |           |                                  |
| PA110-102 | Safety valve PN 200 Bar    | PA112-011 | International connection INT-CGA     |           |                                  |
| PA112-002 | Fitting connection 200 BAR | PA112-012 | Bracket blocks INT-CGA               |           |                                  |

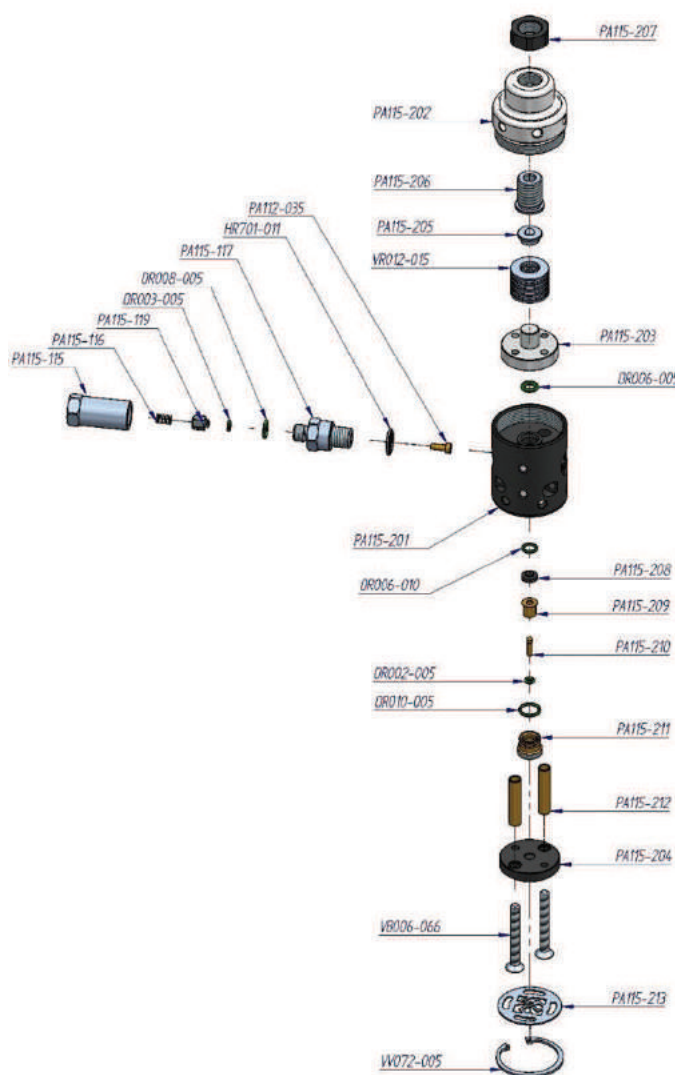 

| <i>CODE</i> | <i>DESCRIPTION</i>     |  | <i>CODE</i> | <i>DESCRIPTION</i>     |  | <i>CODE</i> | <i>DESCRIPTION</i> |  |
|-------------|------------------------|--|-------------|------------------------|--|-------------|--------------------|--|
| HR701-011   | Washer                 |  | PA115-119   | Piston no return valve |  | PA115-211   | Flange             |  |
| OR002-005   | O-ring                 |  | PA115-201   | Body                   |  | PA115-212   | Cylinder           |  |
| OR003-005   | O-ring                 |  | PA115-202   | Flange                 |  | PA115-213   | Flange             |  |
| OR006-005   | O-ring                 |  | PA115-203   | Flange                 |  | VB006-066   | Screw              |  |
| OR006-010   | O-ring                 |  | PA115-204   | Flange                 |  | VR012-015   | Washer             |  |
| OR008-005   | O-ring                 |  | PA115-205   | Spring support         |  | VV072-005   | Safety ring        |  |
| OR010-005   | O-ring                 |  | PA115-206   | Screw                  |  |             |                    |  |
| PA112-035   | Filter                 |  | PA115-207   | Nut                    |  |             |                    |  |
| PA115-115   | Body no return Valve   |  | PA115-208   | Washer                 |  |             |                    |  |
| PA115-116   | Spring no return valve |  | PA115-209   | Cylinder               |  |             |                    |  |
| PA115-117   | Body no return valve   |  | PA115-210   | Piston                 |  |             |                    |  |